


## ENABLE AXIS MULTISENSOR CAMERA IN APEX

### ADDING CAMERAS AUTOMATICALLY


1. Go to **Setup**  > **General Configuration** > **Cameras**.
2. Select **Add Cameras**.
3. Check the box next to the camera **Name**.
4. Update **Username** and **Password** for the selected camera.



5. Click **Add Selected Camera**. [Add Selected Cameras](#)
6. The Multisensor cameras will be displayed in the Camera List.

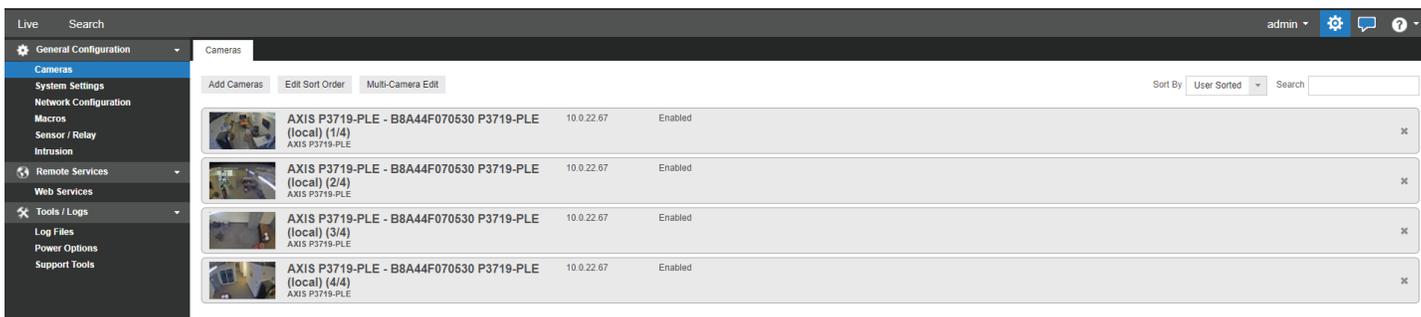


7. Select **Live** to see the cameras displayed in viewing panes.

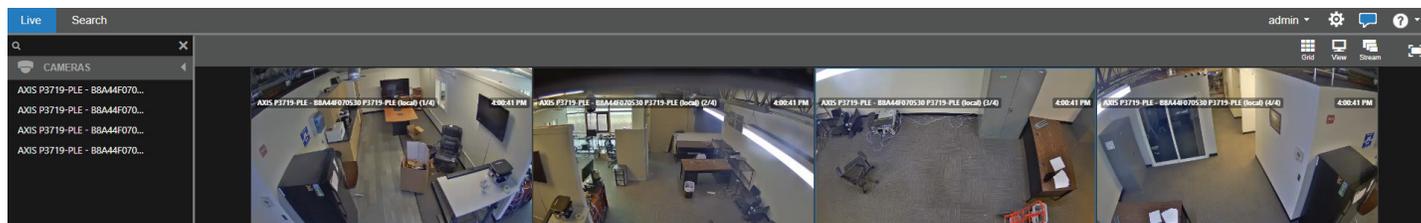


### ADDING CAMERAS MANUALLY

Multisensor cameras can be added manually as an initial step or if one of the multisensor cameras has been previously deleted.


1. Go to **Setup**  > **General Configuration** > **Cameras**.
2. Select **Add Cameras**.
3. Select **Manually Add a Camera**. [Manually Add a Camera](#)

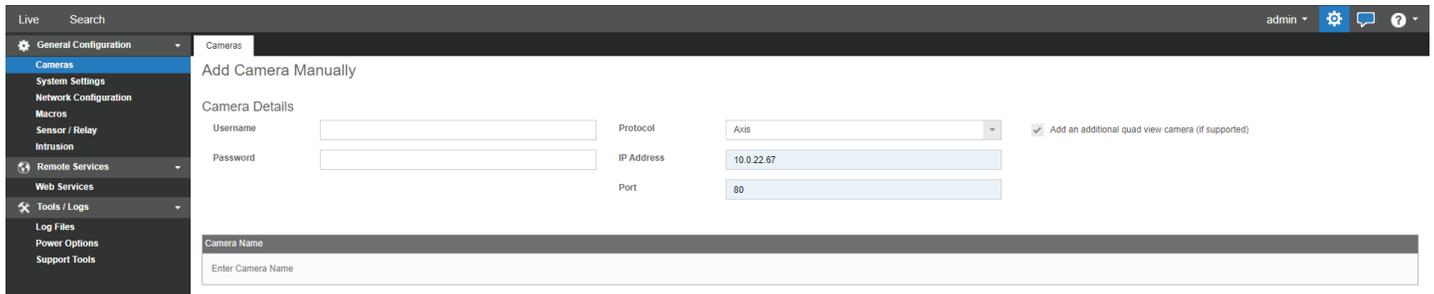

- To add a multisensor camera, enter the **Protocol**, **IP Address**, and **Port**.
- Enter the **Username** and **Password** used to access the camera.
- Enter a **Camera Name**.
- (Optional) Check **Add an additional quad view camera** to display all multisensor camera displays in a viewing pane.

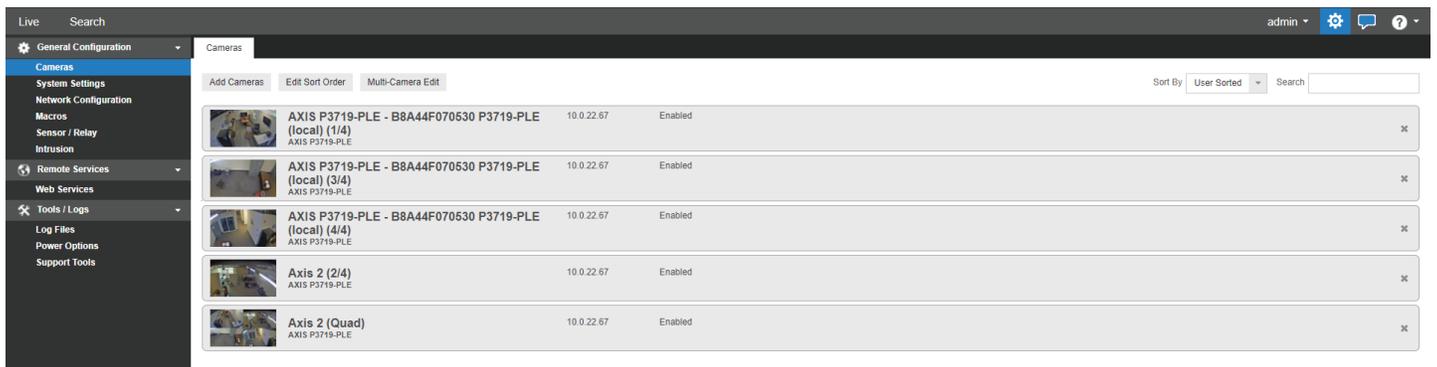

- The added multisensor camera will appear in the Camera List. If the additional quad view was checked, it will also appear in the camera list. The added quad view will also be available in a live viewing pane.

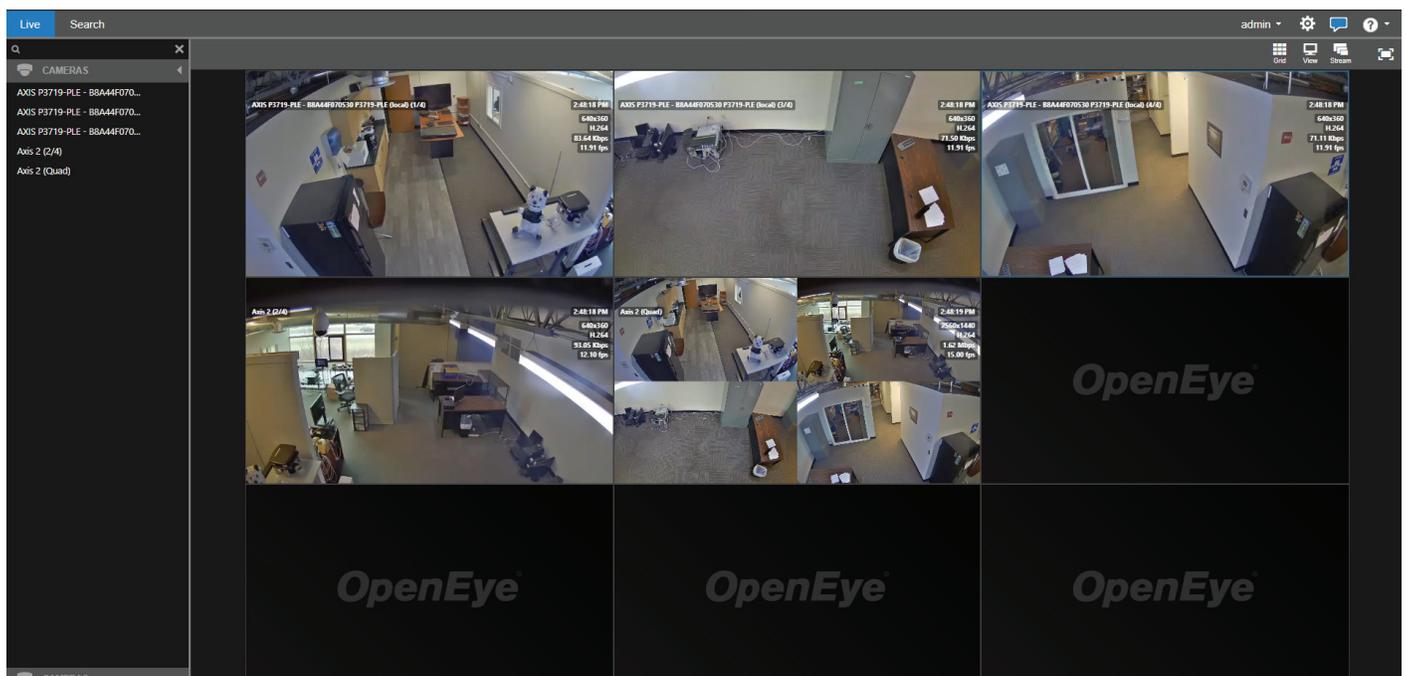

## DELETING A MULTISENSOR CAMERA

1. In **General Configuration > Cameras**, click the  icon on a camera.
2. Select **Delete Camera**.


### Delete Camera

⚠ Are you sure you want to delete this camera? This will delete the camera and all associated video.

To save video from this camera, click Mark as Disabled.

[Mark as Disabled](#) [Delete Camera](#) [Cancel](#)

3. The camera will be removed from the list.

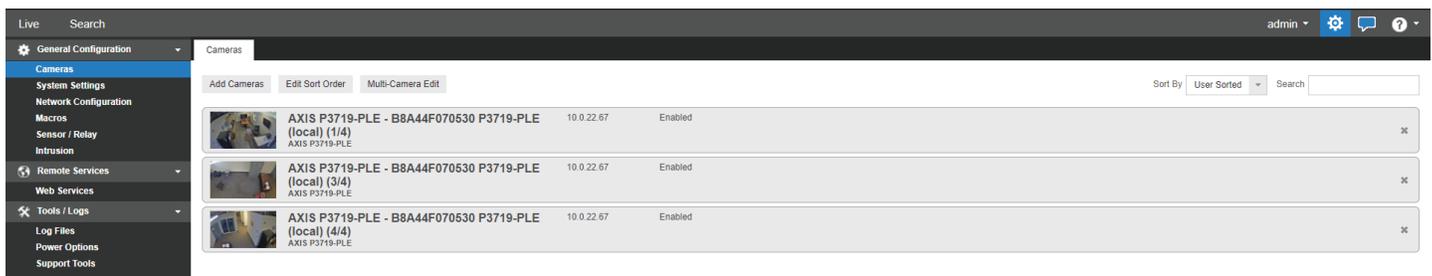

The screenshot shows the OpenEye web interface. On the left is a navigation menu with options like General Configuration, Cameras, System Settings, Network Configuration, Macros, Sensor / Relay, Intrusion, Remote Services, Web Services, Tools / Logs, Log Files, Power Options, and Support Tools. The 'Cameras' section is active, showing a list of three cameras. Each camera entry includes a thumbnail, a name (e.g., 'AXIS P3719-PLE - B8A44F070530 P3719-PLE (local) (1/4)'), a status of 'Enabled', and a delete icon (an 'x' in a square). The top of the interface shows 'Live Search', 'admin', and settings icons.