


CONNECTIONS

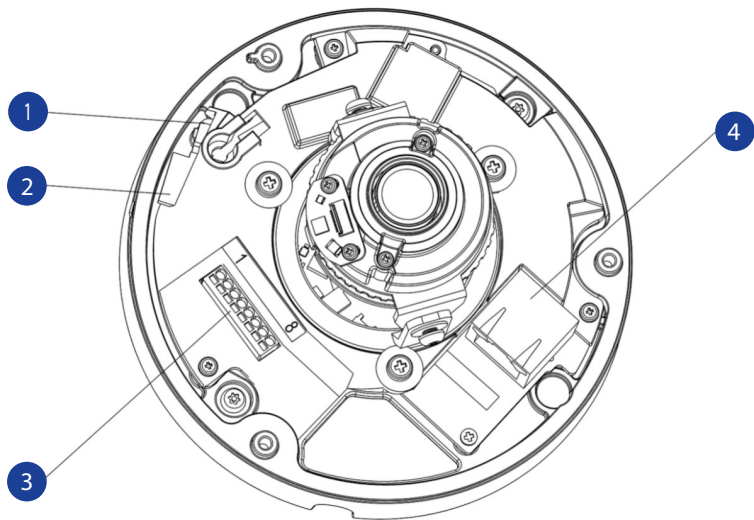

1	microSD Card Slot	-	Insert the microSD card into the slot to store videos and snapshots	
2	Reset Button	-	To restore the camera to factory defaults: 1. Disconnect power for 30 seconds. 2. Reconnect power and wait 30 seconds. 3. Press and hold the reset button for 20 seconds.	
3	Alarm & Audio I / O	1	Audio Out -	Audio connection
		2	Audio Out +	Audio connection
		3	Audio In -	Audio connection
		4	Audio In +	Audio connection
		5	Alarm Output -	Alarm connection
		6	Alarm Output +	Alarm connection
		7	Alarm Input -	Alarm connection
		8	Alarm Input +	Alarm connection
4	RJ-45	-	For network and PoE connections	

This quick start guide provides only basic information on the camera's settings and operation for initial installation. Please read the user manual for optimal camera configurations.

Find the latest product documentation and software.



Scan the QR code or go to openeye.net/downloads



QUICK START GUIDE


5MP Indoor Micro Dome
OE-C1015D5-S




Liberty Lake, WA, USA
509.232.5261
openeye.net

Copyright ©2025 OpenEye.
All Rights Reserved. Information contained in this document is subject to change without prior notice. OpenEye does its best to provide accurate information but cannot be held responsible for typos or mistakes.


CONTENTS

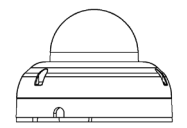


OE-C1015D5-S
Dome Camera

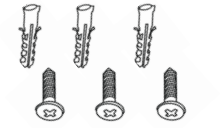


Self-Tapping
Screws (x3) &
Plastic Anchors (x3)

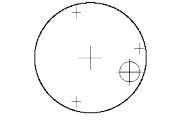


Mounting
Template

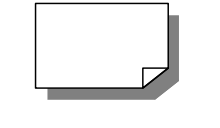


Quick Start
Guide

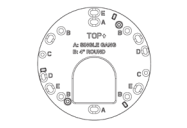


Adapter
Plate

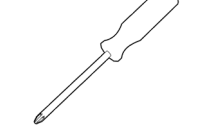


Security Torx
Tool

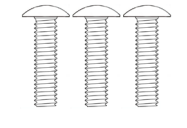


M3x8mm Machine
Screws (x3)

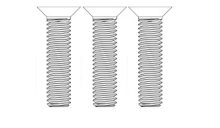


M3x8mm Machine
Screws (M4 Head)
(x3)

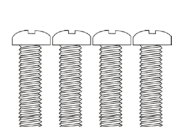

Phillips Screw
#6-32 (x4)

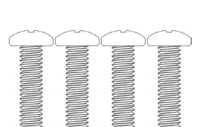

Phillips Screw
#8-32 (x4)



RJ45
Extension Cable

INSTALLATION

1. Apply template sticker to desired camera location.
2. Use a 6mm drill bit to drill anchor holes as indicated on mounting template.
3. Remove mounting template.
4. Insert anchors.
5. Mount camera.
6. Connect network cable.
7. Adjust camera view.
8. Secure lid / dome.

DEFAULT USERNAME AND PASSWORD

NOTE: OpenEye IP cameras ship without a default password.

The admin user password can be set using the following methods:

1. OpenEye recorders running Apex 2.6 or newer will automatically set a new unique password when added in setup, if a new password has not already been set.

Set the Default Camera Password
Use the QR code or link for instructions on defining a unique camera password:
https://answers.openeye.net/Install/Adding_Cameras_and_Camera_Settings/Default_Camera_Password



2. Connect to the camera directly through a Web Browser and follow the onscreen prompts.
3. Use the Network Camera Manager (NCM) Utility.
Username: **admin**

ASSIGNING AN IP ADDRESS

OpenEye IP cameras are set to DHCP by default. If a DHCP server is not detected, the camera will apply Zero Configuration Networking. If an IP address cannot be resolved using either method, the camera will default to IP address 192.168.51.2. If you are not using a DHCP server, NCM will allow you to batch configure a static IP address. The IP address for the camera network on your Apex recorder is 192.168.51.1. Selecting multiple cameras and entering IP address 192.168.51.2 will set an IP address on all selected cameras, starting at 192.168.51.2 and increase per camera.

NOTE: To change this IP address please refer to your Apex recorder manual.

1. Open the Network Camera Manager application.
2. Select applicable camera(s).
3. Input starting IP address, Subnet Mask, Gateway, DNS.
4. Apply changes.
5. Wait 60 seconds before refreshing NCM.


NOTE: The NCM software manual can be found at https://answers.openeye.net/Install/Adding_Cameras_and_Camera_Settings/Network_Camera_Manager

CONNECTING TO THE IP CAMERA

To access the camera setup menu, you need to open Network Camera Manager (NCM) utility. NCM is pre-installed on all OpenEye Recorders, and is also available for download on the OpenEye website for installation on your personal computer or laptop.

1. Open Network Camera Manager.
2. Locate your camera on the Network Camera Manager list.
3. To open the web browser, select the camera and click LOAD.

ADAPTER PLATE

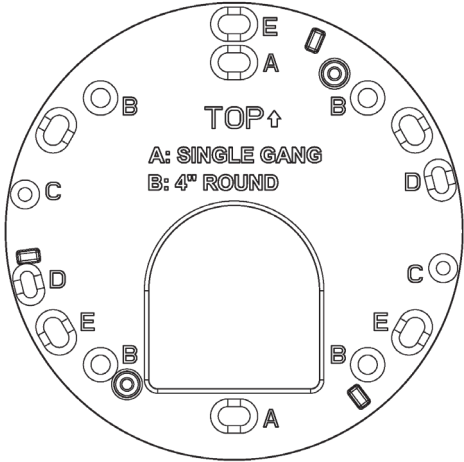

A:	Single Gang junction box
B:	4-inch Round junction box
C:	OE-CA10PC-01
D:	OE-CA10JB-01
E:	OE-CA10WM-01