

OpenEye[®]

The Cloud Video Platform

8MP OUTDOOR BULLET CAMERA

HARDWARE MANUAL



OE- C2012B8 8MP Outdoor Bullet Camera
User Manual

Manual Edition 37644AA – May 2021

©2021, OPENEYE
All Rights Reserved.

No part of this documentation may be reproduced in any means, electronic or mechanical, for any purpose, except as expressed in the Software License Agreement. OpenEye shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is subject to change without notice.

The information in this publication is provided “as is” without warranty of any kind. The entire risk arising out of the use of this information remains with recipient. In no event shall OPENEYE be liable for any direct, consequential, incidental, special, punitive, or other damages whatsoever (including without limitation, damages for loss of business profits, business interruption or loss of business information), even if OPENEYE has been advised of the possibility of such damages and whether in an action or contract or tort, including negligence.

This documentation is copyrighted. All other rights are reserved to OPENEYE. OPENEYE, and OpenEye, are registered trademarks of OPENEYE in the United States and elsewhere; Windows, and Windows XP Embedded are registered trademarks of Microsoft Corporation. All other brand and product names are trademarks or registered trademarks of the respective owners.

OPENEYE
Liberty Lake, WA • U.S.A.

Important Safeguards

Read Instructions

Read all of the safety and operating instructions before using the product.

Retain Instructions

Save these instructions for future reference.

Attachments / Accessories

Do not use attachments or accessories unless recommended by the appliance manufacturer as they may cause hazards, damage product and void warranty.

Installation

Do not place or mount this product in or on an unstable or improperly supported location. Improperly installed product may fall, causing serious injury to a child or adult, and damage to the product. Use only with a mounting device recommended by the manufacturer or sold with the product. To insure proper mounting, follow the manufacturer's instructions and use only mounting accessories recommended by manufacturer.

Power source

This product should be operated only from the type of power source indicated on the marking label.

Precautions

Operating

Before using, make sure power supply and others are properly connected.

While operating, if any abnormal condition or malfunction is observed, stop using the camera immediately and then contact your local dealer.

Handling

Do not disassemble or tamper with parts inside the camera.

Do not drop or subject the camera to shock and vibration as this can damage camera.

Care must be taken when you clean the clear lens cover. Scratches and dust will ruin the image quality of your camera. Do not use strong or abrasive detergents when cleaning the camera body. Use a dry cloth to clean the camera when it is dirty. In case the dirt is hard to remove, use a mild detergent and wipe the camera gently.

Installation and Storage

Do not install the camera in areas of extreme temperatures in excess of the allowable range; install the camera in areas with temperatures within the camera's operating temperature, including the following: -22°F ~ 140°F (-30°C ~ 60°C)

Avoid installing in humid or dusty places. The relative humidity must be below 95%.

Avoid installing in places where radiation is present.

Avoid installing in places where there are strong magnetic fields and electric signals.

Avoid installing in places where the camera would be subject to strong vibrations.

Never face the camera toward the sun. Do not aim at bright objects. Whether the camera is in use or not, never aim it at the sun or other extremely bright objects. Otherwise the camera may be smeared and damaged.

Cleaning

If the video image becomes blurry or smudged in areas, it may be because the lens cover requires cleaning.

To clean the lens cover:

- Use hand soap or a non-abrasive detergent to wash off dirt or fingerprints.
- Use a microfiber cloth or non-abrasive fabric to dry the lens cover.
 - **Important:** Failure to use the recommended cleaning materials may result in a damaged or scratched lens cover. A damaged lens cover may negatively impact image quality and cause unwanted IR light reflecting into the lens.

To clean the camera body:

- Use a dry or lightly dampened cloth to clean the camera body.
- Do not use strong or abrasive detergents.

Regulation

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Compliance is evidenced by written declaration from our suppliers, assuring that any potential trace contamination levels of restricted substances are below the maximum level set by EU Directive 2002/95/EC, or are exempted due to their application.

Warning

DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE.
DO NOT OPEN THE CABINET.
REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

Caution

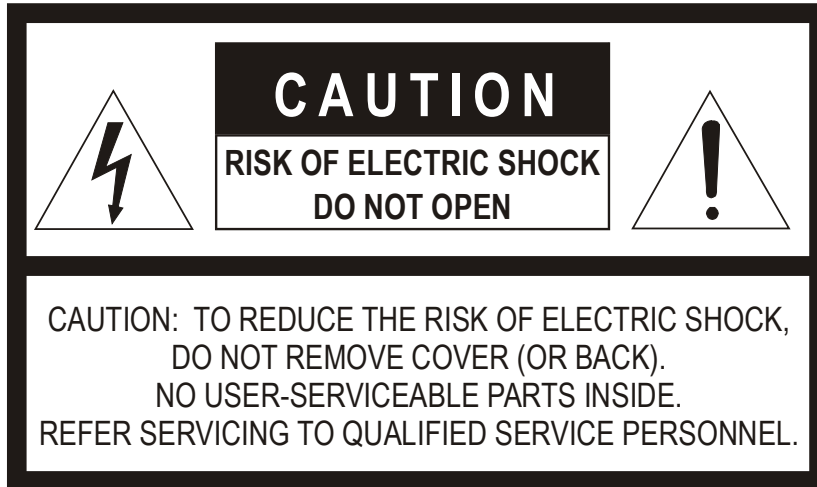


Table of Contents

Introduction	8
Overview	8
Product Features	8
Getting Started.....	9
Box Contents	9
Camera Overview	10
Camera Dimensions	10
Connections	10
Resetting the Camera	11
Power Connection.....	12
NETWORK CAMERA MANAGER	13
Launching Network Camera Manager.....	13
Finding Network Devices.....	13
Username and Password	14
Viewing a Network Camera.....	14
Live View	15
Setup & Configuration.....	16
Basic Camera Settings	16
Basic Information.....	16
Network Settings	17
Network	17
Port.....	18
DDNS.....	19
FTP	20
Email	21
Streaming Settings	22
Video	22
Stream URLs / RTSP	23
Snapshot.....	24
Audio	25
Region of Interest (ROI)	26
Media Stream	27
Picture Settings.....	28
Image	28
On-Screen Display	32
Privacy Mask	33
Event Settings	34
Alarms.....	34
Storage Settings	37
Storage	37
JPEG Download.....	38
Recording Download.....	38
Security Settings	39
User	39
Network Security	40
Watermark	41

Maintenance	41
Time	41
Maintenance.....	42

Introduction

OVERVIEW

The OE-C2012B8 is a rugged outdoor 8MP IP bullet camera equipped with a 2.8~12mm varifocal, autofocus, motorized lens delivering crisp and clear images. True WDR and True Day/Night provide a superior picture in varied lighting conditions. Adaptive IR technology improves low light image performance by adjusting IR output to prevent overexposure of objects as they move closer to the camera. Smart Compression reduces network throughput and increases storage retention without impacting overall video quality. Additional features include audio in/out, as well as sensor and relay connections supported by the enhanced remote monitoring capabilities of the OWS platform.

The OE-C2012B8 is ONVIF™ profile S/G/T compliant and fully compatible with the OpenEye Web Services platform, allowing easy plug-and-play connectivity and complete remote setup using a Web browser.

 


 

PRODUCT FEATURES

- NDAA Compliant
- 2.8~12mm VF, AF, Zoom Lens
- 8MP resolution at up to 20 FPS
- True WDR Image Processing
- Adaptive IR, up to 164' range
- Smart Compression
- Audio In/Out
- Sensor & Relay Connections
- IP67 Ingress Protection
- Size provides a visual deterrent

Getting Started


BOX CONTENTS

Before proceeding, please confirm that the box contains the items listed here. Please contact your dealer for assistance if any item is missing or has defects.

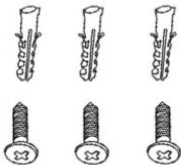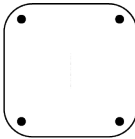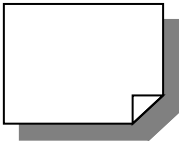
 OE-C2012B8 Bullet Camera	 Self-Tapping Screws and Plastic Anchors x 3
 Mounting Template	 Waterproof Cable Connector
 Quick Start Guide	

CAMERA OVERVIEW

CAMERA DIMENSIONS


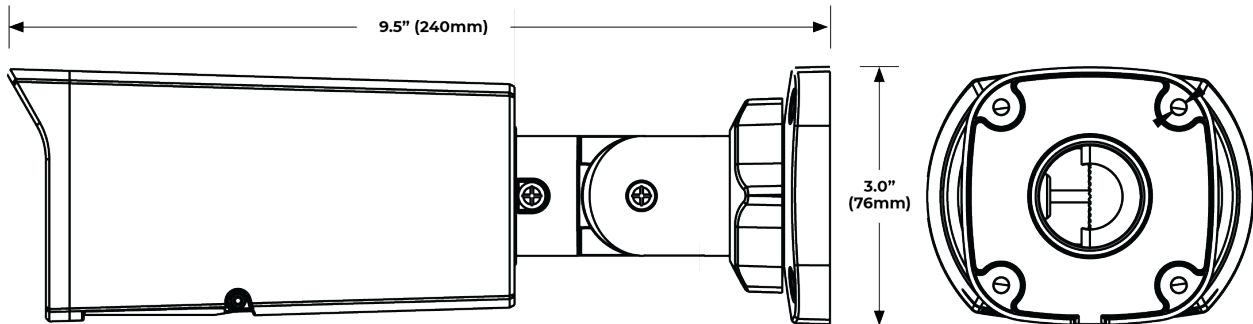


CONNECTIONS

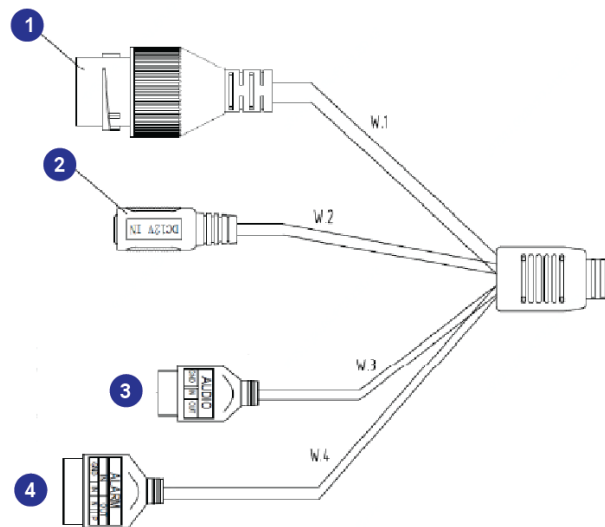

1	RJ-45	For connector and PoE connections
2	Power (12vDC)*	Power connection
3	Audio I/O	Ground
		Audio In
		Audio Out
4	Alarm I/O	Ground
		Alarm In
		Alarm Out -
		Alarm Out +
*12vDC power input port should be plugged when not in use.		

RESETTING THE CAMERA

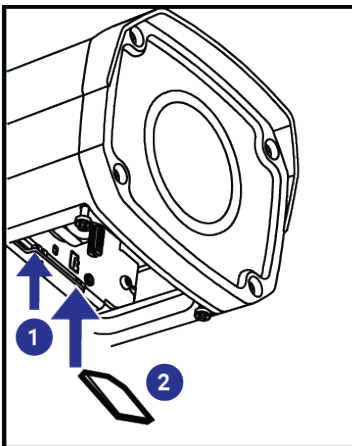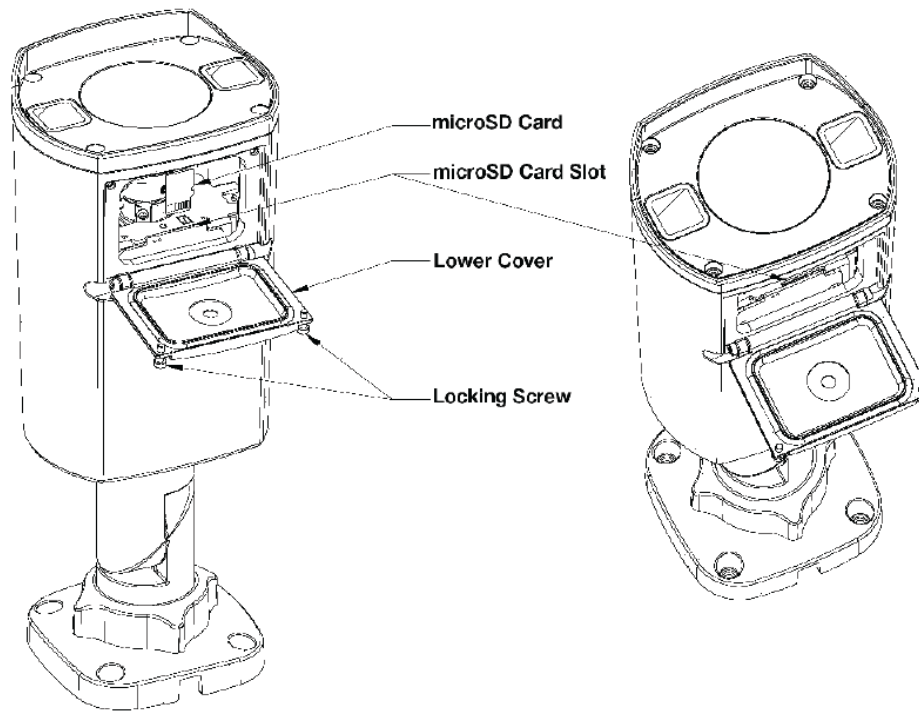

1	Reset	To restore the camera to factory defaults: 1. Disconnect power for 30 seconds. 2. Reconnect power and wait 30 seconds. 3. Open the cover on the underside of the camera by removing the screws. 4. Touch each end of a paperclip to the holes marked "Reset" for 20 seconds.
		Supports up to 512GB microSD card for Edge storage. Do not add or remove the microSD card when the camera is powered on.

POWER CONNECTION

For an adequate power connection, use a 12vDC adaptor. Alternatively, you can power the camera by PoE if a Power Sourcing Equipment (PSE) switch is available. Ensure that the camera's power cable is correctly and firmly connected.



Note

OpenEye recommends against using more than one power source at a time. Do not use a PoE power source when providing the camera with 12vDC power.

If using Power over Ethernet (PoE), make sure Power Sourcing Equipment (PSE) is in use in the network.

NETWORK CAMERA MANAGER

OpenEye Network Camera Manager (NCM) is a software tool that allows you to quickly and easily connect and configure your OpenEye IP Cameras. This software allows you to apply the camera password, assign IP addresses, configure video settings, and update firmware on multiple cameras at once.

NCM is pre-installed on all OpenEye Recorders and is also available for download www.OpenEye.net for installation on your personal computer or laptop. Network Camera Manager is a Java application, this allows it to be installed on Windows and Linux operating systems.

LAUNCHING NETWORK CAMERA MANAGER

Apex Windows Platforms

Network Camera Manager can be found on the desktop.

Linux Platforms

In the Apex Settings menu, go to the **Cameras** page and click **Advanced**.

FINDING NETWORK DEVICES

Click **Refresh** to reload the Device List.

To narrow your search by **Camera Model** or **Network**, use the **Model Filter** and **Networks** dropdowns.

The screenshot shows the Network Camera Manager application window. The title bar reads "Network Camera Manager". The main header is "NETWORK CAMERA MANAGER" with "Version: 2.3.0.92" on the right. Below the header is a table with columns: Model, Name, IP Address, MAC, Web Page, and Firmware. The table contains four rows of camera data. Below the table are dropdown menus for "Model Filter (All)" and "All Networks", along with "Devices Found: 4" and "Devices Selected: 0". There is a "Find MAC" input field, a "Find" button, and an "ONVIF Detection" checkbox. A "Refresh" button is on the right. At the bottom, there are four panels: "Camera Credentials" (with "admin" and "1234" fields), "Network Configuration" (with "IP Address", "Subnet", "Gateway", "DNS" fields and a "DHCP" checkbox), "Firmware Update" (with "Get Firmware", "Browse", and "Apply" buttons), and "Camera Settings" (with "System" and "Video" buttons).

Model	Name	IP Address	MAC	Web Page	Firmware
☐ OE-C7564-AWR_RevB	OE-C7564-AWR_RevB	192.168.51.12	00:D0:89:19:35:A4	Load	
☐ OE-C6123-W2	OE-C6123-W2	192.168.51.16	00:D0:89:17:22:8B	Load	
☐ OE-C7032-WR	OE-C7032-WR	192.168.51.13	4C:91:7A:67:65:B9	Load	
☐ OE-C7088-AWR	OE-C7088-AWR	192.168.51.14	E4:F1:4C:0C:57:57	Load	

A Mac Address search is also available if you are looking for a specific device.

USERNAME AND PASSWORD

**OpenEye IP cameras ship without a default password.*

Username: **admin**

Note Passwords must be 9-32 characters including at least two elements of the following three: digits, letters, and special characters.

The **admin** user password can be set using the following methods:

1. OpenEye recorders running Apex 2.1 or newer will automatically set a new unique password if:
 - Connected to an M-Series recorder with a built in PoE switch.
 - Connected to a network switch through the camera network port and selected then added in setup, if a new password has not already been set.

Note You can set your Default Camera Password under the General Settings page within *Setup > System Settings > General Settings*. For instructions on defining your unique camera password, visit:
<https://www.openeye.net/support/faqs/default-camera-password>

2. Connect to the camera directly through a Web Browser and follow the onscreen prompts.
3. Use the Network Camera Manager (NCM) Utility.

Note The NCM Software Manual can be found at <https://www.openeye.net/ncm-manual>.

Note Refer to your Apex recorder manual or quick start guide for instruction on adding cameras.

VIEWING A NETWORK CAMERA

Click **Load** in the row of the desired camera.

Enter a new Admin password.

- Passwords must be 9-32 characters and include at least two of the following three elements:
 - Digits
 - Letters
 - Special Characters
 - All special characters are allowed

Change Password

Username:

Password:


9 to 32 characters including at least two elements of the following three: digits, letters, and special characters

☐ Weak ☐ Medium ☐ Strong

Confirm:

OK

Live View

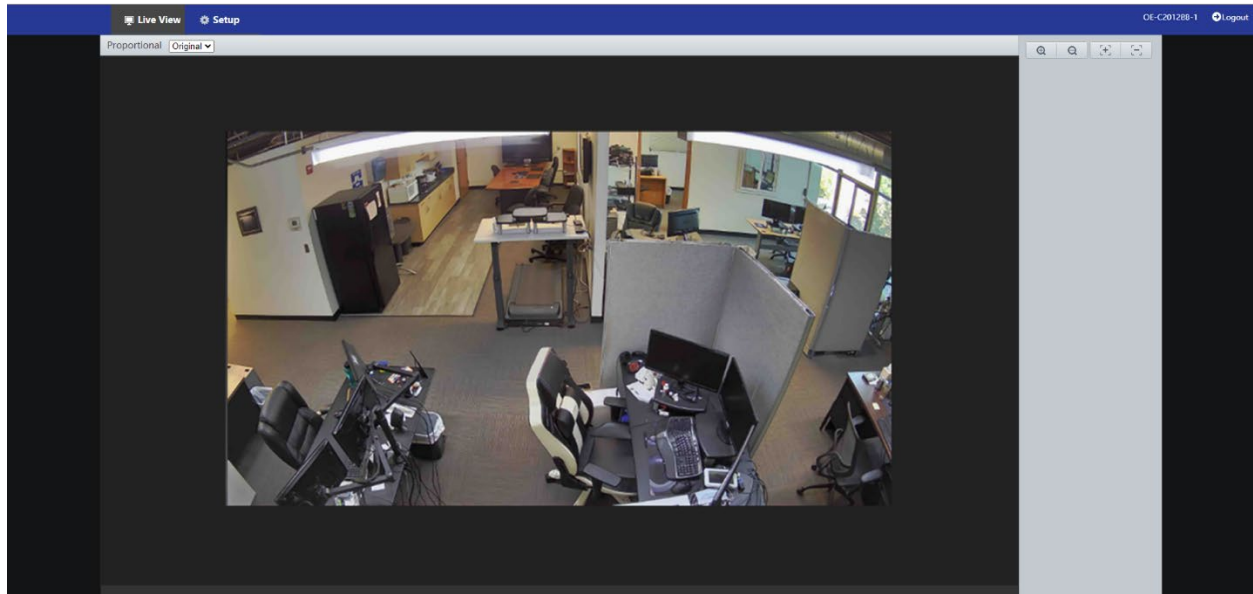

The camera displays a live view using the MJPEG stream for setup purposes.

Proportional – Select the image ratio for the live preview image (Original, Stretch, Scale)

Setup – Go to the Setup tab to access the camera menus

Logout – Log out the current user

Zoom In / Out   – Adjust camera zoom in or out

Focus +/-   – Adjust camera focus

SETUP & CONFIGURATION

BASIC CAMERA SETTINGS

Basic Information

The Basic Information tab displays the product model, firmware, network, and MAC address for the connected camera, along with the current camera Status.

Basic Camera Settings	Basic Info										
Basic Info	<table><tr><th colspan="2">Basic Info</th></tr><tr><td>Model</td><td>IPi</td></tr><tr><td>Network</td><td>192.168.51.17/255.255.255.0/192.168.51.1</td></tr><tr><td>MAC Address</td><td>e4:f1:4c:2c:99:7b</td></tr></table>	Basic Info		Model	IPi	Network	192.168.51.17/255.255.255.0/192.168.51.1	MAC Address	e4:f1:4c:2c:99:7b		
Basic Info											
Model	IPi										
Network	192.168.51.17/255.255.255.0/192.168.51.1										
MAC Address	e4:f1:4c:2c:99:7b										
Image											
Video											
Network											
Time											
Network Settings	<table><tr><th colspan="2">Version Info</th></tr><tr><td>Firmware Version</td><td>IPC_G6203-B0001P67D1911C67test</td></tr><tr><td>Hardware Version</td><td>A</td></tr><tr><td>Boot Version</td><td>V2.0</td></tr><tr><td>Serial No.</td><td>210235C4NR320C000004</td></tr></table>	Version Info		Firmware Version	IPC_G6203-B0001P67D1911C67test	Hardware Version	A	Boot Version	V2.0	Serial No.	210235C4NR320C000004
Version Info											
Firmware Version	IPC_G6203-B0001P67D1911C67test										
Hardware Version	A										
Boot Version	V2.0										
Serial No.	210235C4NR320C000004										
Streaming Settings											
Picture Settings											
Event Settings											
Storage Settings											
Security Settings	<table><tr><th colspan="2">Status</th></tr><tr><td>System Time</td><td>2021/4/13 21:11:44</td></tr><tr><td>Operation Time</td><td>2 Day(s) 23 Hour(s) 55 Minute(s)</td></tr></table>	Status		System Time	2021/4/13 21:11:44	Operation Time	2 Day(s) 23 Hour(s) 55 Minute(s)				
Status											
System Time	2021/4/13 21:11:44										
Operation Time	2 Day(s) 23 Hour(s) 55 Minute(s)										
Maintenance	Refresh										

The nested Image, Video, Network, and Time tabs are shortcuts to the more advanced menu options further down the Setup list. For more information about these tabs, see the appropriate sections later in the manual.

NETWORK SETTINGS

Network

The Network tab allows you to configure the connected camera network settings.

DHCP IP Address

The default static IP address of the camera is 192.168.51.2, and the default subnet mask is 255.255.255.0. DHCP is turned on by default.

If a DHCP server is used in the network, the IP address of your camera may be assigned dynamically.

The image displays two side-by-side screenshots of the 'Basic Camera Settings' web interface, specifically the 'Network' tab. Both screenshots show the 'Network Settings' section with a sidebar on the left containing links to Network, Port, DDNS, FTP, E-mail, Streaming Settings, Picture Settings, Event Settings, Storage Settings, Security Settings, and Maintenance. The main content area is divided into sections: DHCP/Static IP, IPv6, DNS, and MTU/Port Type/Operating Mode. In the left screenshot, 'DHCP/Static IP' is set to 'DHCP'. In the right screenshot, it is set to 'Static', and the 'IP Address' field is populated with '192.168.51.17', 'Subnet Mask' with '255.255.255.0', and 'Default Gateway' with '192.168.51.1'. The 'IPv6' section in both shows 'Mode' as 'Manual', 'Prefix Length' as '64', and an empty 'Default Gateway' field. The 'DNS' section shows 'Preferred DNS Server' as '8.8.8.8' and 'Alternate DNS Server' as '8.8.4.4'. The 'MTU' is '1500', 'Port Type' is 'FE Port', and 'Operating Mode' is 'Auto-negotiation'. A 'Save' button is located at the bottom of the settings area in both screenshots.

Static IP Address

To set up a new static IP address:

1. Select **Static** from the **DHCP/Static IP** dropdown option.
2. Enter the **IP Address**, **Subnet Mask**, and **Default Gateway**.

***Note** - Make sure that the IP address of the camera is unique in the network.

3. **Save**

IPv6 Address Configuration

1. Enter the **IPv6 Address**, set the **Prefix Length** and **Default Gateway**.

***Note** - Make sure that the IP address of the camera is unique in the network.

2. **Save**

DNS

Set your **Preferred DNS Server** and **Alternate DNS Server**.

Port

Port Type	External Port	External IP Address	Status
HTTP Port	80	0.0.0.0	Inactive
RTSP Port	554	0.0.0.0	Inactive
Server Port	81	0.0.0.0	Inactive
HTTPS Port	443	0.0.0.0	Inactive

HTTP Port – Configure your relevant port number.



Note If the HTTP port number has been occupied already, a “Port conflicts” message will display. Ports 23, 81, 82, 85, 3260, and 49152 are occupied by default.

HTTPS Port – The default HTTPS Port is 443; setting range: 1024 ~65535.

RTSP Port – The default RTSP port is 554; setting range: 1024 ~65535.



Note No port number can be used in duplication on more than one item.

Port Mapping

To enable Port Mapping:

1. Toggle **On** for **Port Mapping**.
2. Use the **Mapping Type** dropdown menu to select a type.
3. If selecting **Manual**, the external ports must be configured.



Note If the configured port is already occupied, then the Status will show as inactive and a new port must be selected.

4. **Save**

DDNS

Basic Camera Settings		DDNS
Network Settings		
Network		
Port		
DDNS		
FTP		
E-mail		
Streaming Settings		
Picture Settings		
Event Settings		
Storage Settings		
Security Settings		
Maintenance		
DDNS Service	☐ On ☒ Off	
DDNS Type	NO-IP	
Server Address	www.noip.com	
Domain Name		
Username		
Password		
Confirm		
Save		

1. **Enable** DDNS Service.
2. Select a **DDNS Type**.
3. Enter **Server Address**, **Domain Name**, **Username** and **Password**.
4. **Save**

FTP

Use FTP (file transfer protocol) to upload snapshots from network cameras to a specified server.

The screenshot shows the 'Basic Camera Settings' menu with 'FTP' selected. The 'General' tab is active, displaying 'Server Parameters' and 'Snapshot Image' sections. The 'Server Parameters' section includes fields for 'Server IP' (0.0.0.0), 'Port No.' (21), 'Username', and 'Password'. There are checkboxes for 'Upload Images' and 'Overwrite Storage', and a text field for 'Overwrite At(image)' set to '1000'. A 'Test' button is also present. The 'Snapshot Image' section includes a 'Save To' dropdown, a 'Root Directory' path with four 'Disable' dropdowns, a 'File Name' field, and a 'Separator' dropdown. Below these is a table for naming elements.

No.	Naming Element
1	None
2	
3	
4	
5	

A 'Save' button is at the bottom of the configuration area. A note at the very bottom states: 'Note: Overwrite will take place in the current directory.'

To configure FTP:

1. Set the **Server IP** address and **Port No.** for the FTP server, **Username** and **Password** used to upload images to the FTP server, select **Upload Images**, **Overwrite Storage** and set **Overwrite At** (threshold for overwriting images).
2. Set the path for saving snapshots on the FTP server and the file name format.

Example: set path as Preset No.\\IP Address\\Date\\Hour(s), and set file name as Preset No.-PTZ Zoom-PTZ Latitude-PTZ Longitude.jpg.

3. **Save.**

Email

The camera can send an e-mail via Simple Mail Transfer Protocol (SMTP) when a variety of events occur. Two sets of SMTP accounts can be configured. Each set includes SMTP Server, Account Name, Password and E-mail Address settings. For SMTP server, contact your network service provider for more specific information.

Basic Camera Settings	E-mail
Network Settings	
Network	
Port	
DDNS	
FTP	
E-mail	
Streaming Settings	
Picture Settings	
Event Settings	
Storage Settings	
Security Settings	
Maintenance	

Sender	
Name	
Address	
SMTP Server	
SMTP Port	25
TLS/SSL	☐ On ☒ Off
Snapshot Interval(s)	2 ☒ Attach Image
Server Authentication	☒ On ☐ Off
Username	
Password	

Recipient	
Name1	
Address1	Test
Name2	
Address2	Test
Name3	
Address3	Test
Save	

Parameter	Description
TLS/SSL	When enabled, the e-mail will be encrypted using TLS (Transport Layer Security) or Secure Socket Layer (SSL) to protect privacy. First it tries to send through an SSL connection. If the SMTP server supports SSL, the e-mail will be sent through the SSL connection; otherwise, it tries to send using STARTTLS.
Attach Image	When enabled, the e-mail will contain 3 instant snapshots as attachment according to the Capture Interval.
Username/Password	Username and password of the registration email address. The password allows the following special characters \ / : * ? ' " < > % &

STREAMING SETTINGS

Video

The video settings menu configures the camera's video settings, including **Resolution**, **Frame Rate**, **Bit Rate**, and the **Image Quality**.

To configure camera streams:

Use the dropdown menus to configure the **Video Compression**, **Resolution**, **Frame Rate**, **Bitrate Type**, **Smart Encoding**, and **GOP**.

1. Check to **Enable Sub Stream** and configure if desired.
2. **Save**

Smart Encoding – Turn on Smart Encoding to enable H.264+ encoding to reduce bit rate. It is recommended not to set the frame rate below 10FPS when smart compression is enabled.

Resolution and Frame Rate – Use the dropdown menu to select the base resolution and frame rate for the main stream.



Note Higher frame rate will increase video smoothness but will increase file size and bandwidth usage. Lowering the frame rate will conserve file size and bandwidth usage at the expense of video smoothness.

Video Compression – H.264, H.265, and MJPEG are available for video compression.

Image Quality – If the Encoding Mode is set to VBR, you can adjust the quality level for images by moving the sliding bar. The Quality side of the bar improves video quality, and the Bit Rate side of the bar reduces Bit rate.

I-Frame Interval / GOP – The Group of Pictures setting allows you to modify the frame structure of the video stream. This setting changes the frequency of the I-frames that occur within the stream of P-frames. Increasing this number increases the number of P-frames between each I-frame, decreasing the file size of the stream, but increasing the risk of video decoding errors. It is recommended setting the GOP to be approximately twice the frame rate.

Smoothing – Configure the amount of video smoothing. Moving the sliding bar toward Smooth increases the level of smoothing but may affect image quality.



Note In a poor network environment, you can increase smoothing to get more fluid video.

Stream URLs / RTSP

It is possible to connect to OpenEye IP cameras using third party software like VLC media player.

To connect some types of software will need to know the stream URL. All OpenEye IP cameras can deliver two RTSP streams.

The RTSP stream URL format is as follows:

rtsp://[USER]:[PASSWORD]@[IP ADDRESS]:[RTSP PORT]/media/video[STREAM]

[USER] – This is the username to access your device

[PASSWORD] – This is the password to the user

[IP ADDRESS] – This is the IP address of your device

[RTSP PORT] – This is the RTSP port of your device; the default RTSP Port is 554

[STREAM] –

- Primary Stream: video1
- Sub-stream: video2

Example:

[USER]	<i>admin</i>
[PASSWORD]	<i>1\$S!9#6v\$\$\$1</i>
[IP ADDRESS]	<i>192.168.51.51</i>
[RTSP PORT]	<i>554</i>
[STREAM]	<i>1</i>

RTSP Stream URL - *rtsp://admin:1\$S!9#6v\$\$\$1@192.168.51.51:554/media/video1*

Snapshot

The Snapshot tab is used to configure the settings for timed or continual snapshots.

The screenshot displays the 'Snapshot' configuration tab. On the left, a sidebar lists various settings categories, with 'Snapshot' currently selected. The main configuration area includes dropdowns for 'Resolution' (set to 720*576) and 'Most Large(KB)' (set to 300). Below these are fields for 'Snapshot Interval' (set to 1) and 'Number to Snapshot' (set to 1). The 'Snapshot Mode' section has two radio buttons: 'Schedule' (selected) and 'Repeat'. A table below this mode section lists scheduled snapshots with columns for 'No.' and 'Snapshot Time'. Three entries are shown: No. 1 at 14:20:00, No. 2 at 14:21:00, and No. 3 at 14:22:00. Each entry has a trash icon to its right. A 'Save' button is located at the bottom of the configuration area.

To configure Snapshots:

1. Use the dropdowns to select the desired **Resolution**, **Snapshot Interval**, and the **Number of Snapshots**.
2. If you desire Scheduled Snapshots, select **Schedule** Snapshot Mode, and designate snapshot times.
3. **Save**

Parameter	Description
Snapshot Interval	Interval between two snapshots. For example, with Snapshot Interval set to 1 and Number of Snapshot set to 2, the camera will take 2 snapshots (take one first and then take another after 1 second).
Number to Snapshot	Currently 1, 2, and 3 snapshots are allowed.
Snapshot Mode	Schedule: You need to set a snapshot time, e.g., 19:12:00, which means the camera takes a snapshot at 19:12:00. Repeat: Allows you to set an interval (unit: sec). For example, according to the settings shown in the figure above, 60 seconds must elapse before the camera takes another two snapshots.

Audio

The Audio tab allows you to configure the audio encoding settings for your camera.

The screenshot shows a settings menu with a sidebar on the left containing the following categories: Basic Camera Settings, Network Settings, Streaming Settings, Video, Snapshot, Audio (highlighted with a blue arrow), ROI, Media Stream, Picture Settings, Event Settings, Storage Settings, Security Settings, and Maintenance. The main panel is titled 'Audio' and is divided into two sections: 'Audio Input' and 'Audio Output'. The 'Audio Input' section includes: 'Audio Input' with radio buttons for 'On' (selected) and 'Off'; 'Access Mode' with a dropdown menu set to 'Line/Mic'; 'Input Gain' with a numeric input set to '128' and a range '[0~255]'; 'Audio Compression' with a dropdown menu set to 'G.711U'; 'Sampling Rate(KHz)' with a dropdown menu set to '8'; 'Noise Suppression' with radio buttons for 'On' (selected) and 'Off'; and 'Audio 1' with a dropdown menu set to 'Line' and an 'Enable' checkbox that is checked. The 'Audio Output' section includes: 'Audio Output' with a dropdown menu set to 'Line'. At the bottom of the main panel is a 'Save' button.


To configure Audio setup:

1. Configure the Audio settings as desired.
2. **Save**

Parameter	Description
Audio Input	No audio data will be encoded when Off is selected. Note: It is recommended to select Off if you do not need audio. This can improve device performance to some extent.
Access Mode	Line/Mic
Audio Compression	Two options: G.711U, G.711A. G.711U and G.711A support 8K sampling rate only.
Input Gain	Audio signal amplification for sampling. The greater the gain, the greater amplification.
Noise Suppression	Used to reduce noise in images. To enable noise suppression, select On .
Audio 1	Audio input channel(s). To enable audio input, select Enable .
Audio Output	Audio output channel.

Region of Interest (ROI)

When Region of Interest (ROI) is enabled, the system ensures the image quality for the ROI first if the bit rate is insufficient.

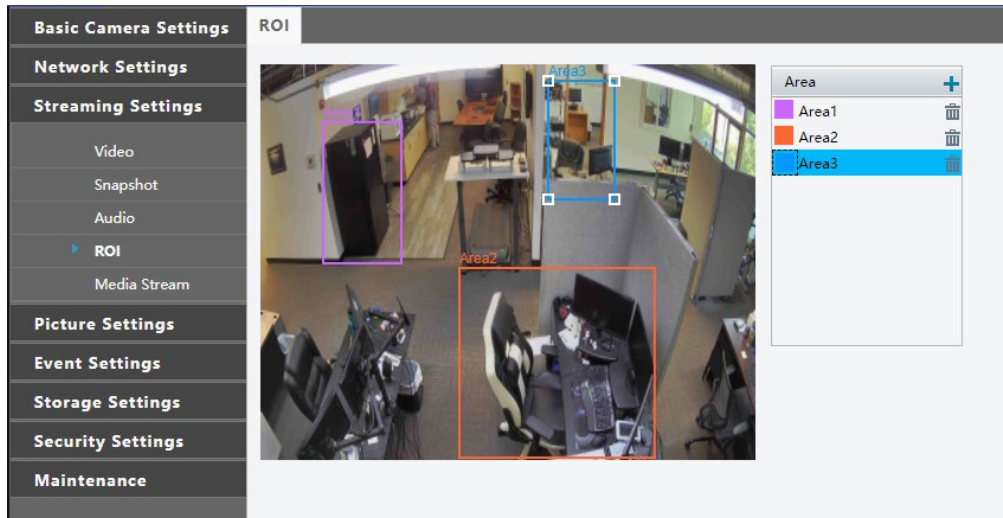

To enable ROI:

1. Click **+** on the Area box.
2. Arrange the ROI square as desired in the camera image. Click and drag to move the square and use the corner markers to expand the square. The interior of the ROI square will be considered the ROI.
3. Click **+** again to add additional ROIs.
4. Click the trash icon to delete a created ROI.

Changes will be saved automatically.

Media Stream

You can display the established media streams from a camera. You can also set the camera to transmit code streams by the UDP or TCP protocol to a specified IP address and port number.



Note Changes to the media stream will take effect after the camera has been restarted.

Stream Profile	Protocol	Destination IP	Destination...	Persistent	
Sub Stream	TCP	10.0.70.108	44216	Disable	
Main Stream	TCP	10.0.70.108	44218	Disable	
Main Stream	TCP	10.0.22.37	58529	Disable	
Sub Stream	TCP	10.0.22.37	59558	Disable	

Main Stream
Multicast Address:
Port:

Sub Stream
Multicast Address:
Port:

To configure media streams:

1. Click the **+** on the right side of the title bar and the Add Media Stream page will appear.

Stream Profile	Protocol	Destination IP	Destination ...	Persistent	Status	+
----------------	----------	----------------	-----------------	------------	--------	---

2. Select a **Stream Type**, and then set the **IP Address** and **Port Number** of the unicast or multicast group for the decoding device that receives audio and video streams from the camera.

Add Media Stream
Stream Profile:
IP Address:
Port:
Protocol:
Persistent: ☐ Enable ☒ Disable

3. Toggle **Persistent** to **Enable** if you want the device to establish the media stream that you have just configured automatically upon each subsequent restart.
4. **Save**
5. Click the trashcan icon to **delete** a created media stream.

Stream Profile	Protocol	Destination IP	Destination ...	Persistent	Status	+
Sub Stream	TCP	192.168.51.3	50184	Disable	streaming	

PICTURE SETTINGS

Image

The Image tab allows you to configure the setting for the camera image as seen in Live View. When adjusting your image settings, the changes will be saved automatically and will display in the camera image preview window.

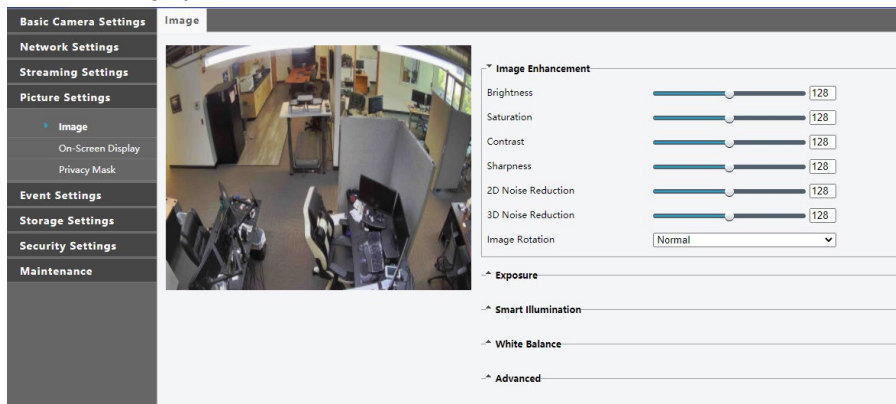



Image Enhancement

Use the sliding scales to adjust the Image settings or set a numeric value in the value box. The dropdown Image Rotation menu will rotate the camera image.



Exposure

By default, the Exposure Mode is set to Automatic. Other options include Custom, Indoor 50hz, Indoor 60hz, and Manual. Using Custom or Manual allows you to manually configure the shutter and gain control.

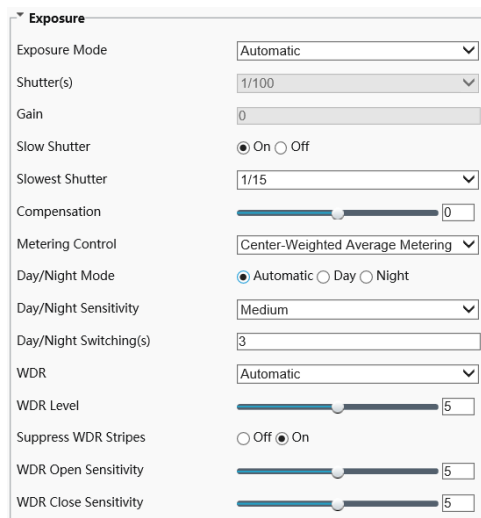

Parameter	Description
Exposure Mode	• Automatic: The camera automatically adjusts exposure according to the environment. • Custom: The user sets exposure as needed. • Indoor 50Hz: Reduce stripes by limiting shutter frequency. • Indoor 60Hz: Reduce stripes by limiting shutter frequency. • Manual: Finetune image quality by setting shutter, gain and iris manually. • Low Motion Blur: Control the minimum shutter to reduce motion blur in faces captured in motion.
Shutter (s)	Shutter is used to control the light that comes into the lens. A fast shutter speed is ideal for scenes in quick motion. A slow shutter speed is ideal for scenes that change slowly. Note: • You can set a shutter speed when Exposure Mode is set to Manual or Shutter Priority. • If Slow Shutter is set to Off, the reciprocal of the shutter speed must be greater than the frame rate.
Gain	Control image signals so that the camera outputs standard video signals according to the light condition. Note: You can set this parameter only when Exposure Mode is set to Manual or Gain Priority.
Slow Shutter	Improves image brightness in low light conditions.
Slowest Shutter	Set the slowest shutter speed that the camera can use during exposure. Note: You can set this parameter only when Slow Shutter is set to On.
Compensation	Adjust the compensation value as required to achieve the desired effects. Note: You can set this parameter only when Exposure Mode is not set to Manual.
Metering Control	Set the way the camera measures the intensity of light. • Center-Weighted Average Metering: Measure light mainly in the central part of images. • Evaluative Metering: Measure light in the customized area of images. • Face Metering: Adjust image quality in poor lighting conditions by controlling the brightness of captured face in Face scene. Note: You can set this parameter only when Exposure Mode is not set to Manual.
Day/Night Mode	Automatic: The camera outputs the optimum images according to the light condition. In this mode, the camera can switch between night mode and day mode automatically. Night: The camera provides high-quality black and white images using the existing light Day: The camera provides high-quality color images using the existing light.
Day/Night Sensitivity	Light threshold for switching between day mode and night mode. A higher sensitivity means that the camera is more sensitive to the change of light and becomes more easily to switch between day mode and night mode. Note: You can set this parameter only when Day/Night Mode is set to Automatic.
Day/Night Switching(s)	Set the length of time before the camera switches between day mode and night mode after the conditions for switching are met. Note: You can set this parameter only when Day/Night Mode is set to Automatic.

WDR	Enable WDR to distinguish the bright and dark areas in the same image. Note: You can set this parameter only when Exposure Mode is neither Customize nor Manual and when Image Stabilizer is disabled.
WDR Level	After enabling the WDR function, you can improve the image by adjusting the WDR level. Note: Use level 7 or higher when there is a high contrast between the bright and dark areas of the scene. In the case of low contrast, it is recommended to disable WDR or use level 1-6.
Suppress WDR Stripes	When enabled, the camera can automatically adjust slow shutter frequency according to the frequency of light to minimize stripes that may appear in images.

Smart Illumination

Smart Illumination

Smart Illumination

☒ On ☐ Off

Lighting Type

Infrared

Control Mode

Overexposure Restrain

Illumination Level

0

Parameter	Description
Lighting Type	Infrared: The camera uses infrared light illumination.
Control Mode	Global Mode: The camera adjusts IR illumination and exposure to achieve balanced image effects. Some areas might be overexposed if you select this option. This option is recommended if monitored range and image brightness are your first priority. Overexposure Restrain: The camera adjusts IR illumination and exposure to avoid regional overexposure. Some areas might be dark if you select this option. This option is recommended if clarity of the central part of the image and overexposure control are your first priority. Manual: This mode allows you to manually control the intensity of IR illumination.
Illumination Level	Set the intensity level of the IR light. The greater the value, the higher the intensity. 0 means that the IR light is turned off. Note: You can set this parameter only when Control Mode is set to Manual .

White Balance

White balance is the process of offsetting unnatural color cast in images under different color temperatures to output images that best suit human eyes.

White Balance

White Balance

Auto

Red Offset

19

Blue Offset

20

Parameter	Description
White Balance	Adjust the red or blue offset of the image: Auto/Auto2: The camera adjusts the red and blue offset automatically according to the light condition (the color tends to be blue). If the images are still unnaturally red or blue in Auto mode, please try Auto2. Fine Tune: Allow you to adjust the red and blue offset manually. Outdoor: Suitable for outdoor environment with a relatively greater color temperature range. Locked: Lock the current color temperature without change. Sodium Lamp: The camera adjusts red and blue offset automatically according to the light condition (the color tends to be red).
Red Offset	Adjust the red offset manually. Note: You can set this parameter only when White Balance is set to Fine Tune.
Blue Offset	Adjust the blue offset manually. Note: You can set this parameter only when White Balance is set to Fine Tune.

Advanced

Advanced

Defog

Off

Defog Intensity

5

Dewarping

Off

Dewarping Level

5

Defog – Adjust the clarity of images captured in fog or haze conditions.

- Use the Defog dropdown menu to turn Defog **On** or **Off**.
- Slide the **Defog Intensity** bar to the desired position (1 is the minimum intensity and 9 is the maximum intensity).

Dewarping – Adjust the fisheye view from curved to flat.

- Use the Dewarping dropdown menu to turn Dewarping **On** or **Off**.
- Slide the **Dewarping Intensity** bar to the desired position (1 is the minimum intensity and 9 is the maximum intensity).



Note The Defog function is only available when WDR is disabled.

On-Screen Display

Up to 8 on-screen displays (OSD) can be configured for the camera image.

Enable	No.	Overlay OSD Content	X-axis	Y-axis
☐	1		02	03
☐	2		05	03
☐	3		02	05
☐	4		00	00
☐	5		00	00
☐	6		00	00
☐	7		00	00
☐	8		00	00

Display Style

Effect: Background
Font Size: Medium
Min. Margin: None
Date Format: dd/MM/yyyy
Time Format: HH:mm:ss

dd=Day; dddd=Day of the week; M=Month; y=Year
h/H=12/24 Hour; tt=A.M. or P.M.; mm=Minute;
ss=Second

To add an on-screen display:

1. Select the position and content of the OSD.
 - a. **Position:** Click the desired box in the Live View area. After the cursor shape is changed, click and hold the button to move the box to the desired position. To set the position precisely, use the X and Y coordinates.
 - b. **Overlay OSD Content:** The drop-down list provides Time, Preset and Serial Info. You may also select Custom and enter the content you want.
2. After you have completed the settings, a message appears to indicate the successful settings.
3. To cancel OSD for an area, clear the OSD content in the Overlay OSD Content column.



Note To view the OSD in the web browser Live View, you must refresh the browser after setting the OSD for the changes to take effect.

Privacy Mask

Add a privacy mask to your camera image to hide desired areas from view.

Basic Camera Settings

Network Settings

Streaming Settings

Picture Settings

Image

On-Screen Display

Privacy Mask


Event Settings

Storage Settings

Security Settings

Maintenance

Privacy Mask

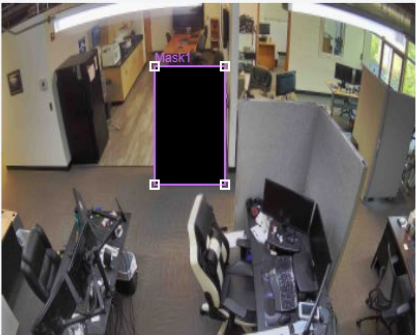

AddDelete

No.	Name
1	Mask1

To **add** a privacy mask:

1. Click **Add**.
2. Click and drag the newly generated **mask square** to the desired location on the camera image. Arrange and resize the mask as needed.

To **delete** a privacy mask:

1. Select the desired mask from the Privacy Mask list.
2. Click **Delete**.


Changes will be saved automatically.

EVENT SETTINGS

Alarms

Motion Detection

Motion detection is used to detect motion in a specified area during a period of time. The use of motion detection requires setting a detection area, detection sensitivity, object size, and history. When these requirements are met, the motion detection alarm will activate.

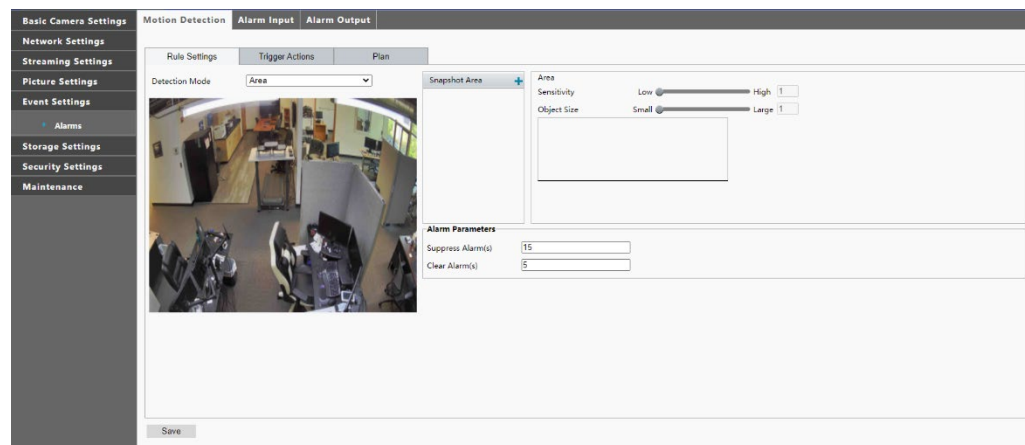

To configure Motion Detection:

1. Click **+** on **Snapshot Area** to add a detection box in the camera image. Click and drag to move the detection box to the desired location in the camera image and use the corner markers to adjust the size of the detection box as desired.
2. Use the **Sensitivity** and **Object Size** slider bars to adjust the motion detection parameters as desired.

Sensitivity – This determines how many pixels must change in order for the alarm to consider motion to have occurred.

Object Size – This determines the area within the camera image that the motion must exceed for the alarm to consider motion to have occurred.

Alarm Parameters

Suppress Alarm – After an alarm is triggered, the same alarm will not be reported again within the designated time.

Clear Alarm – After the alarm is triggered:

- a) If the same alarm is not triggered within the set time, the alarm will be cleared, and the same alarm can be reported again.
- b) If the same alarm is triggered within the set time, the alarm will not be cleared until the suppress alarm time expires. Then the same alarm can be reported again.

Select the **Trigger Actions** to occur once the motion detection alarm has been triggered.

Trigger Actions

Upload to FTP - With Upload to FTP selected, the camera will automatically upload snapshots to the specified FTP server when an alarm is triggered.

Note Make sure you have completed FTP and Snapshot before using this function.

Send E-mail - With Send E-mail selected, the camera will automatically send snapshots to the specified E-mail address when an alarm is triggered.

Note Make sure you have completed E-Mail setup before using this function.

A > 1 - This setting is the alarm output interface linked to motion detection alarm.

Note When an alarm is reported, the camera triggers alarm output to trigger actions by a third-party device.

Recording Edge Storage - With Recording Edge Storage selected, the camera will automatically upload video to the microSD card when an alarm is triggered.

Note This option is only available if the camera has a microSD card installed.

Image Edge Storage - With Image Edge Storage selected, the camera will automatically upload snapshots to the microSD card when an alarm is triggered.

Note This option is only available if the camera has a microSD card installed.

Plan

Select the **Enable Schedule** check box and set the start and end times during which motion detection alarm is enabled. You can directly drag the mouse to draw a plan and click Edit to edit time periods in the table. The camera reports alarms during the specified period(s) only. You can select from Monday to Sunday and set four periods for each day.

Save

Alarm Input

The screenshot shows a web interface for configuring alarm settings. On the left is a sidebar menu with categories: Basic Camera Settings, Network Settings, Streaming Settings, Picture Settings, Event Settings, Alarms (selected), Storage Settings, Security Settings, and Maintenance. The main content area has tabs for Motion Detection, Alarm Input (active), and Alarm Output. Under the Alarm Input tab, there's a 'Select Alarm' dropdown set to 'Alarm Input 1'. Below this are three sub-tabs: Rule Settings, Trigger Actions, and Plan. The Rule Settings sub-tab is active, showing fields for Alarm Name (containing '1'), Alarm ID, Alarm Type (dropdown set to 'N.O.'), and Alarm Input (radio buttons for On and Off, with Off selected). A 'Save' button is at the bottom left of the form.

To configure Alarm Input:

1. **Select Alarm, Alarm Name and Alarm ID.**
2. Select **N.O.** or **N.C.** according to the type of the third-party alarm input device (For example, if the third-party alarm input device is normally open, you need to select N.O. here) so that the camera can receive alarm information.
3. Set actions to be triggered by an input alarm and the plan. For the detailed steps, see the descriptions of triggered actions in Configuring Motion Detection Alarm.
4. **Save**

Alarm Output

After an alarm output is triggered by a motion detection alarm, audio alarm, or other third-party configured alarm, the camera can trigger an alarm output to a third-party device.

Basic Camera Settings | Motion Detection | Alarm Input | Alarm Output

Network Settings

Streaming Settings

Picture Settings

Event Settings

Alarms

Storage Settings

Security Settings

Maintenance

Select Alarm: Alarm Output 1

Rule Settings | Output Schedule

Alarm Name:

Default Status: N.O.

Delay(s): 30

Relay Mode: Monostable

Save

To configure Alarm Output:

1. **Select Alarm** and the **Alarm Name**.
2. Select **N.O.** as the **Default Status** and set the **Delay** and **Relay Mode**.
3. If desired, set the **Output Schedule**. See the *Motion Detection* section for more information about the Alarm Schedule.

Basic Camera Settings | Motion Detection | Alarm Input | Alarm Output

Network Settings

Streaming Settings

Picture Settings

Event Settings

Alarms

Storage Settings

Security Settings

Maintenance

Select Alarm: Alarm Output 1

Rule Settings | Output Schedule

☒ Enable Schedule

☒ Armed ☐ Unarmed Edit

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Mon

Tue

Wed

Thu

Fri

Sat

Sun

Save

4. **Save**

Caution

Follow the power-on sequence for alarm output third-party devices and cameras carefully to avoid damaging camera components.

Check that the alarm Status is set to **N.O.** (default setting), and that the camera and the alarm output device are powered off.

After completing the connection, power on the alarm output device first, and then power on the camera.

STORAGE SETTINGS

Storage

This camera includes an integrated microSD™ card (Memory Card) slot that can be used to record video or images. The card slot is compatible with a microSD™ card up to 512GB.

Basic Camera Settings | **Storage**

Storage Medium: Memory Card [Format] [Enable]

Storage Medium Status: No card

Total Capacity 0 MB, Free Space 0 MB.

Allocate Capacity

Video(MB): 0 (The remaining capacity is used for image storage.)

Common Snapshot(MB): 0

Video Storage Info

Storage Policy: ☐ Manual Storage ☐ Planned Storage ☒ Off

When Storage Full: ☐ Overwrite ☒ Stop

Post-Record(s): 60

[Save]

Note Formatting the microSD card causes the camera to restart

Note Camera date and time must be synced with system or server to insure accurate recording timestamps

Format

To format the memory card, check **Enable** and to confirm the operation. The system will restart when the format is completed.

Allocate Capacity

Video (MB) – Enter the amount of storage space to be allocated only to video recordings.

Common Snapshot (MB) – This is the remaining storage after video recordings which will be used to store snapshot images.

Video Storage Info

Storage Policy

Manual Storage – records video to the SD card continuously.

Planned Storage – camera records video to the memory card during the specified periods. (shown below)

Off – No recorded video will be saved to the SD card.

When Storage Full


Overwrite – When the SD card is full, new data will begin overwriting oldest data.

Stop – When the SD card is full, video recording will stop writing to the SD card.

Post-Record(s) – For alarm-triggered recording; this is the length of time (seconds) that recording continues after the end of the alarm. Enter an integer range of [30–1800].

Save


JPEG Download

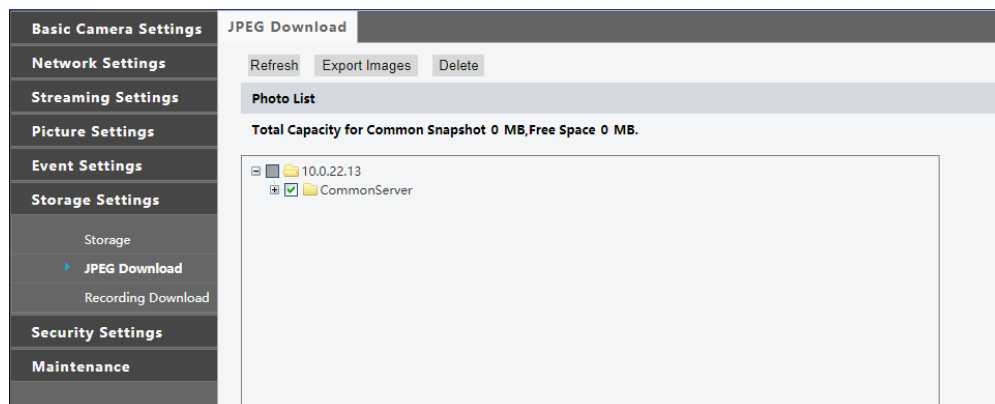

Use Export Images to download snapshots taken by the camera. Refresh the list to update Photo List or Delete to delete images from the selected folder.

Recording Download


Recording download page allows you to search a selected date range for video and snapshots recorded to the microSD card.

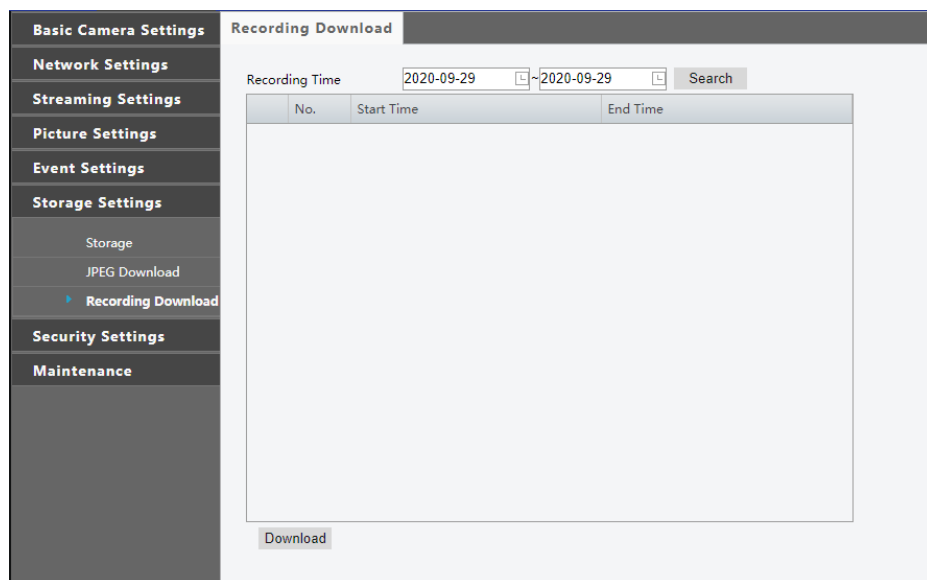

1. Search for video within a specified period. The results will be shown in a list below.
2. Select your video and click **Download**.

SECURITY SETTINGS

User

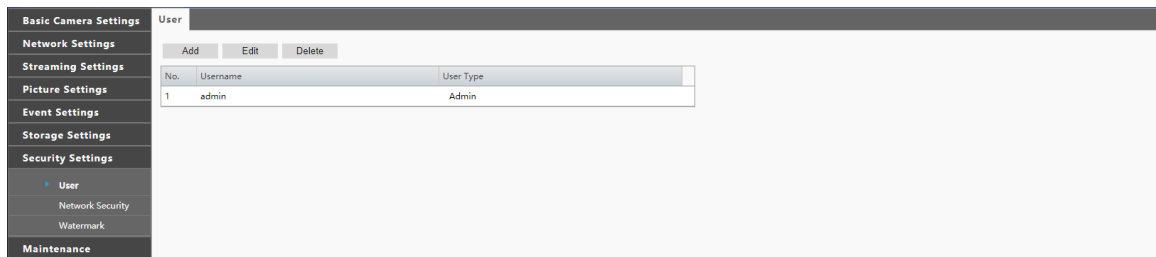

There are two types of users:

Administrator – referred to as “admin” in this manual. The default name of the administrator is **admin**, which cannot be modified. Admin has full permission and can manage all users and devices. Only one admin user is allowed.

Common User – referred to as “user” in this manual. User only has permission to play live and recorded video.

Up to 20 common users are allowed.

Add

Username and passwords are limited to 32 characters with no spaces permitted. There is a maximum of twenty user accounts.

1. Type the new **Username** and **User Type**.
2. Type a **Password**, and then confirm the password.
3. **Save**

Edit

1. Select the **Username** on the **User list**.
2. Click **Edit**.
3. Modify the password in the resulting window.
4. **Save**

Delete

1. Select the **Username** on the **User list**.
2. Click **Delete** to remove the user.
3. Click **OK** in the confirmation window.

Network Security

You can use the Network Security tab to set a secure channel for data transmission.

Basic Camera Settings | **HTTPS**

HTTPS ☐ On ☒ Off

SSL Certificate

RTSP Authentication

HTTP Authentication

IP Address Filtering ☐ On ☒ Off

Filtering Mode

No.	IP Address

To configure Network Security:

1. Enable HTTPS by selecting **On** or click **Browse** to upload your custom **SSL certificate** if desired.
2. **Save**

RTSP and HTTP Authentication

Use the **Authentication** dropdown menus to select the appropriate mode, and then click **Save**.

IP Address Filtering


IP Address filtering allows you to forbid access from specified IP addresses to your camera.

1. Select **On**.
2. Select a **Filtering Mode**, and then click the **+** symbol to add the desired IP addresses to the list.
3. **Save**



Note If the Filtering Mode is set to **Whitelist**, only the specified IP addresses are allowed to access the camera. If the Filtering Mode is set to **Deny Access**, the specified IP addresses are denied access. Up to 32 IP addresses can be added to the list.

Watermark

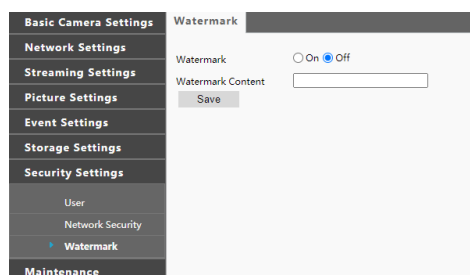


Use the Video Watermark to encrypt the camera image and protect the video from being deleted or modified.

1. Select **On** to enable watermark, and input **Watermark Content**.
2. **Save**

MAINTENANCE

Time

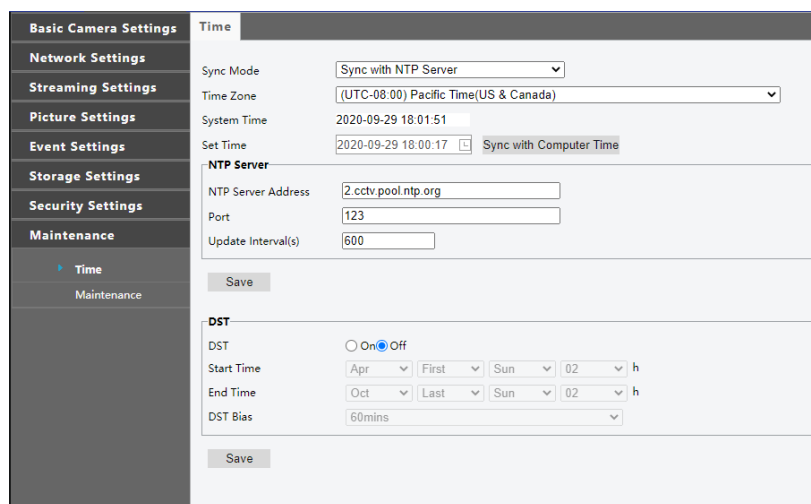

By default, the time setting **Sync Mode** will be set to **Sync with NTP Server**.

Manually Setting or Synchronizing the System Time

1. Select a **Sync Mode**.
2. Set the correct **Time Zone** and **System Time**. You may also click **Sync with Computer Time** to synchronize the time settings of your camera with that of your PC.
3. **Save**

Synchronizing with the NTP Server

1. Set **Sync Mode** to **Sync with NTP Server**, and then set the **NTP Server Address**, **Port** and **Update Interval(s)**.
2. Click **Save**. The camera will periodically synchronize time with the NTP server.

Setting the DST

1. Select **On** for **DST**, set the **Start Time**, **End Time**, and **DST Bias**.
2. **Save**

Maintenance

Basic Camera Settings

Network Settings

Streaming Settings

Picture Settings

Event Settings

Storage Settings

Security Settings

Maintenance

Time

Maintenance

Maintenance

Software Upgrade

Local Upgrade **Browse...** **Upgrade**

Config Management

Default ☐ Restore all settings to defaults without keeping current network and user settings.

Importing **Browse...** **Import**

Exporting **Export**

Diagnosis Info

Export Diagnosis Info **Export**

☒ Collect Image Debugging Info

Device Restart

Restart Restart device

Software Upgrade

To update your camera software, click **Browse**, select the software file, click **Open**, and then click **Upgrade**.



Note The software file must be a .zip file.

Device Restart

This will restart your camera.

Config Management

1. To import configurations that you have backed up, click **Browse**, select the configuration file, and then click **Import**.
2. To export current system configurations, click **Export**.
3. To restore default configurations, click **Default** and then confirm the operation. The device will restart and restore the default configurations. Clicking **Default** with the check box selected will default all camera and camera network settings.

Diagnosis Info

Diagnostic Information includes logs and system configuration. You can export diagnostic information to your PC.



Note Diagnostic information is exported to the local folder as a compressed file. You will need to decompress the file, and then open the file using a text editor.

www.openeye.net
1-888-542-1103

© 2021 OpenEye

All rights reserved. No part of this publication may be reproduced by any means without written permission from OpenEye. The information in this publication is believed to be accurate in all respects. However, OpenEye cannot assume responsibility for any consequences resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.