
CONNECTIONS

 


1	RJ-45	For network and PoE connections	
2	Power (12vDC)*	Power connection	

^{*12}vDC power input port should be plugged when not in use.

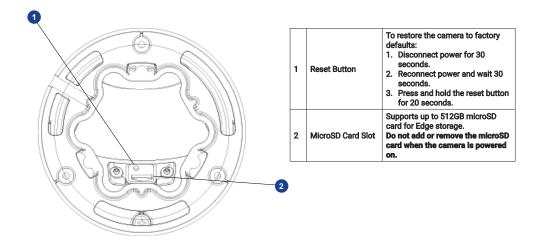

Waterproof Cable



1	Thread lock cap	4	Rubber "O" ring
2	Rubber plug	5	Camera cable
3	RJ45 enclosure		

This quick start guide provides only basic information on the camera's settings and operation for initial installation. Please read the user manual for optimal camera configurations.

Find the latest product documentation and software.



Scan the QR code or go to openeye.net/downloads



4MP Outdoor IP Turret OE-C3012T4



All Rights Reserved. Information contained in this document is subject to change without prior notice. OpenEye does its best to provide accurate information but cannot be held responsible for typos or mistakes.

CONTENTS



OE-C3012T4 Turret Camera



Self-Tapping
Screws &



Waterproof Cable Connector



Quick Start Guide



Mounting Template

INSTALLATION

Connect a network cable to the camera using the RJ45 input and connect the other end of the cable to your network switch or recorder.

- Apply template sticker to desired camera location.
- 2. Drill anchor holes using included mounting template.
- 3. Remove mounting template.
- Insert anchors.
- Mount camera.
- Connect network cable with included waterproof cable connector.
- Adjust camera view.

DEFAULT USERNAME AND PASSWORD

NOTE: OpenEye IP cameras ship without a default password.

The admin user password can be set using the following methods:

- OpenEye recorders running Apex
 2.1 or newer will automatically set a new unique password if:
 - Connected to an M-Series recorder with a built in PoE switch.
 - Connected to a network switch through the camera network port and selected then added in setup, if a new password has not already been set.

Set the Default Camera Password

Use the QR code or link for instructions on defining a unique camera password: https://www.openeye.net/support/faqs/default-camera-password



- Connect to the camera directly through a Web Browser and follow the onscreen prompts.
- Use the Network Camera Manager (NCM) Utility.

Username: admin

ASSIGNING AN IP ADDRESS

OpenEye IP cameras are set to DHCP by default. If a DHCP server is not detected after 4 minutes, the camera will default to IP address 192.168.51.2. If you are not using a DHCP server, NCM will allow you to batch configure a static IP address.

The IP address for the camera network on your Apex recorder is 192.168.51.1.

NOTE: To change this IP address please refer to your Apex recorder manual.

Selecting multiple cameras and entering IP address 192.168.51.2 will set an IP address on all selected cameras, starting at 192.168.51.2 and increase per camera.

- 1. Open the Network Camera Manager application.
- 2. Select applicable camera(s).
- 3. Input starting IP address, Subnet Mask, Gateway, DNS.
- 4. Apply changes.
- Wait 60 seconds before refreshing NCM.

NOTE: The NCM software manual can be found at https://www.openeye.net/ncm-manual

CONNECTING TO THE IP CAMERA

To access the camera setup menu, you need to open Network Camera Manager (NCM) utility. NCM is preinstalled on all OpenEye Recorders, and is also available for download on the OpenEye website for installation on your personal computer or laptop.

- 1. Open Network Camera Manager.
- 2. Locate your camera on the Network Camera Manager list.
- 3. To open the web browser, select the camera and click LOAD.

PRODUCT FEATURES

Camera			
Maximum Resolution	2688x1520		
Frame Rate at Maximum Resolution	30FPS @ 4MP H.264/H.265		
Total Streams	Dual Streaming		
ONVIF	Profile S / G / T Compliant		
Day/Night	True Day / Night		
Wide Dynamic Range	True WDR		

Environmental a	vironmental and Power		
Power Consumption	8.16W maximum		
Input Voltage	12vDC / PoE		
	Pan: 0° ~ 360°		
Pan / Tilt / Rotate	Tilt: 0° ~ 90°		
	Rotate: 0° ~ 360°		
IP Rating	IP67		