


CONNECTIONS

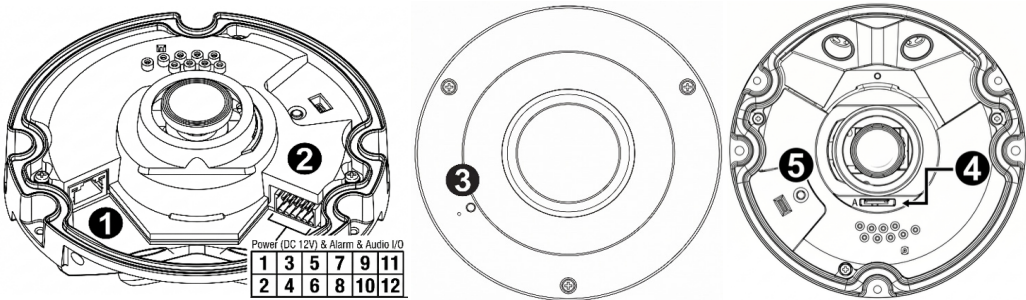

No	Connector	Pin	Definition
1	RJ-45 Port	-	For network and PoE connections
2	Power (DC12V) & Alarm & Audio I/O	1	Audio IN R
		2	Audio Out R
		3	Audio IN L
		4	Audio Out L
		5	GND
		6	GND
		7	Alarm Out +
		8	Alarm In +
		9	Alarm Out -
		10	Alarm In -
		11	DC 12V+
		12	DC 12V -
3	Built-in Microphone	-	Audio In
4	microSD Card Slot	-	Insert the SD card into the card slot to store videos and snapshots. Do not remove the SD card when the camera is powered on.
5	Default Button	-	Press the button with a proper tool for at least 20 seconds to restore the system.

This quick start guide provides only basic information on the camera's settings and operation for initial installation. Please read the user manual for optimal camera configurations.

Find the latest product documentation and software.



Scan the QR code or go to openeye.net/downloads



QUICK START GUIDE


12MP 360 IP Fisheye
OE-C3226F12



Liberty Lake, WA, USA
509.232.5261
openeye.net

Copyright ©2026 OpenEye.
All Rights Reserved. Information contained in this document is subject to change without prior notice. OpenEye does its best to provide accurate information but cannot be held responsible for typos or mistakes.

CONTENTS

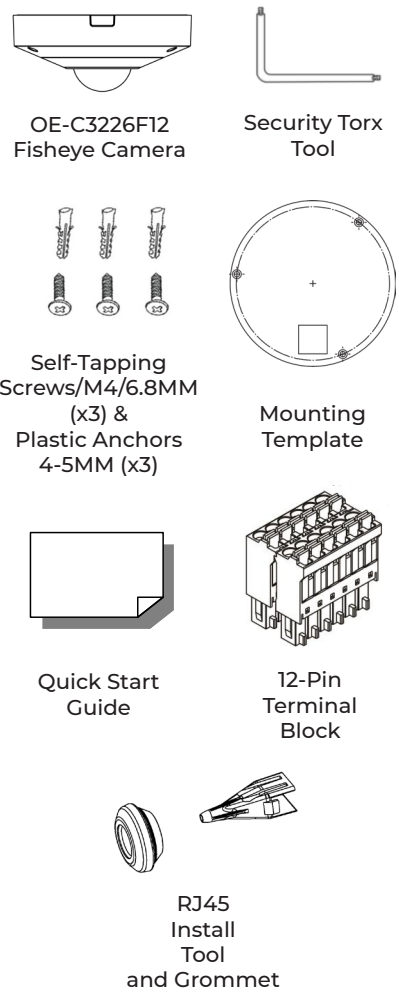

INSTALLATION

- 1. Apply template sticker to desired camera location.
- 2. Drill anchor holes using included mounting template.
- 3. Remove mounting template.
- 4. Insert anchors.
- 5. Pass network cable through the grommet and install into the camera base.
- 6. Mount camera.

POWER

This camera is compatible with DC12V and Power over Ethernet (PoE). Connect power to the camera using the terminal connector blocks.

CAUTION: Risk of explosion of battery if replaced by an incorrect type. Dispose of used batteries according to the instructions.

DEFAULT USERNAME AND PASSWORD

NOTE: OpenEye IP cameras ship without a default password.

The admin user password can be set using the following methods:

- 1. OpenEye recorders running Apex 2.6 or newer will automatically set a new unique password when added in setup, if a new password has not already been set.

Set the Default Camera Password
Use the QR code or link for instructions on defining a unique camera password:
https://answers.openeye.net/Install/Adding_Cameras_and_Camera_Settings/Default_Camera_Password



- 2. Connect to the camera directly through a Web Browser and follow the onscreen prompts.
 - 3. Use the Network Camera Manager (NCM) Utility.
- Username: [admin](#)

ASSIGNING AN IP ADDRESS

OpenEye IP cameras are set to DHCP by default. If a DHCP server is not detected after 4 minutes, the camera will default to IP address 192.168.51.2. If you are not using a DHCP server, NCM will allow you to batch configure a static IP address. The IP address for the camera network on your Apex recorder is 192.168.51.1.

NOTE: To change this IP address please refer to your Apex recorder manual.

- 1. Open the Network Camera Manager application.
- 2. Select applicable camera(s).
- 3. Input starting IP address, Subnet Mask, Gateway, DNS.
- 4. Apply changes.
- 5. Wait 60 seconds before refreshing NCM.


NOTE: The NCM software manual can be found at https://answers.openeye.net/Install/Adding_Cameras_and_Camera_Settings/Network_Camera_Manager

CONNECTING TO THE IP CAMERA

To access the camera setup menu, you need to open Network Camera Manager (NCM) utility. NCM is pre-installed on all OpenEye Recorders, and is also available for download on the OpenEye website for installation on your personal computer or laptop.

- 1. Open Network Camera Manager.
- 2. Locate your camera on the Network Camera Manager list.
- 3. To open the web browser, select the camera and click LOAD.

RJ45 CABLE GROMMET

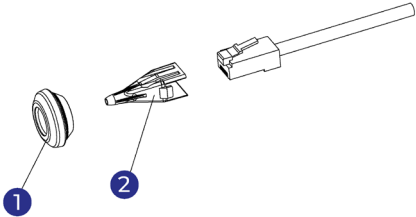

#	Name
1	Grommet
2	RJ45 Install Tool