



CONNECTIONS

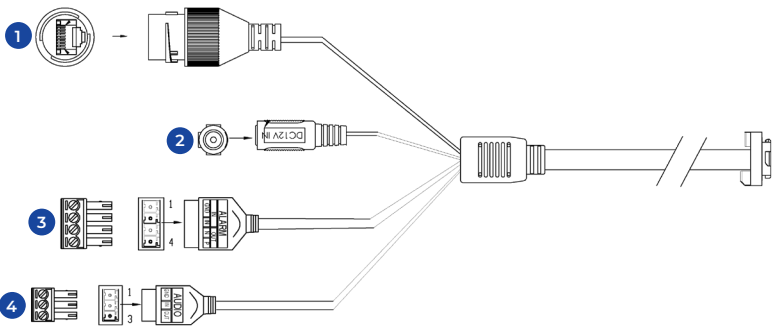

No	Connector	Pin	Definition
1	RJ-45 Port	-	For network and PoE connections
2	Power (DC12V)*	-	Power Connection
3	Alarm I/O	GND	Ground
		IN	Alarm In
		N	Alarm Out -
		P	Alarm Out +
4	Audio I/O	GND	Ground
		IN	Audio In
		OUT	Audio Out

*DC12V power input port should be plugged when not in use.

WATERPROOF CABLE

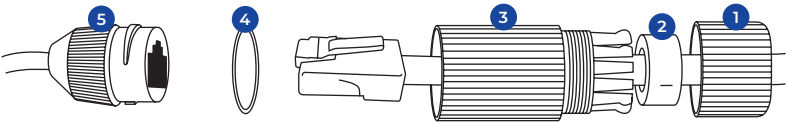

1	Thread lock cap	4	Rubber "O" ring
2	Rubber plug	5	Camera cable
3	RJ45 enclosure		

QUICK START GUIDE

8MP Outdoor IP Multisensor Camera
OE-C9812M8-S

 
Find the latest product
documentation and software.




Scan the QR code or go to
openeye.net/downloads

This quick start guide provides only basic information on the camera's settings
and operation for initial installation. Please read the user manual for optimal
camera configurations.


CONTENTS



OE-C9812M8-S
Multisensor
Camera

 


Waterproof
Cable
Connector

 

Self-Tapping
Screws/M4/6.8MM
(x3) &
Plastic Anchors
4-5MM (x3)



 Security Torx
Tool



Quick Start
Guide



Mounting
Template

INSTALLATION

1. Apply template sticker to desired camera location.
2. Drill anchor holes using included mounting template.
3. Remove mounting template.
4. Insert anchors.
5. Mount camera.
6. Connect network cable with included waterproof cable connector.

POWER

This camera is compatible with DC12V and Power over Ethernet (PoE). Connect power to the camera using the terminal connector blocks.

CAUTION: Risk of explosion of battery if replaced by an incorrect type. Dispose of used batteries according to the instructions.

DEFAULT USERNAME AND PASSWORD

NOTE: OpenEye IP cameras ship without a default password.

The admin user password can be set using the following methods:

1. OpenEye recorders running Apex 2.6 or newer will automatically set a new unique password when added in setup, if a new password has not already been set.

Set the Default Camera Password

Use the QR code or link for instructions on defining a unique camera password:
https://answers.openeye.net/Install/Adding_Cameras_and_Camera_Settings/Default_Camera_Password



2. Connect to the camera directly through a Web Browser and follow the onscreen prompts.
3. Use the Network Camera Manager (NCM) Utility.

Username: **admin**

ASSIGNING AN IP ADDRESS

OpenEye IP cameras are set to DHCP by default. If a DHCP server is not detected after 4 minutes, the camera will default to IP address 192.168.51.2. If you are not using a DHCP server, NCM will allow you to batch configure a static IP address.

The IP address for the camera network on your Apex recorder is 192.168.51.1.

NOTE: To change this IP address please refer to your Apex recorder manual.

1. Open the Network Camera Manager application.
2. Select applicable camera(s).
3. Input starting IP address, Subnet Mask, Gateway, DNS.
4. Apply changes.
5. Wait 60 seconds before refreshing NCM.

NOTE: The NCM software manual can be found at https://answers.openeye.net/Install/Adding_Cameras_and_Camera_Settings/Network_Camera_Manager

CONNECTING TO THE IP CAMERA

To access the camera setup menu, you need to open Network Camera Manager (NCM) utility. NCM is pre-installed on all OpenEye Recorders, and is also available for download on the OpenEye website for installation on your personal computer or laptop.

1. Open Network Camera Manager.
2. Locate your camera on the Network Camera Manager list.
3. To open the web browser, select the camera and click LOAD.