 
 


PREPARING THE CAMERA

 
1. Loosen the 6 screws to remove the bottom cover.

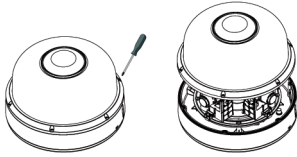


2. Remove and discard the protective EPE from the lens modules.

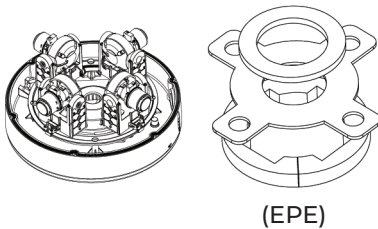

3. Remove the desiccant packet from its package. Peel away the protective paper to expose the adhesive strip and install the desiccant in the recommended position with the adhesive strip down.

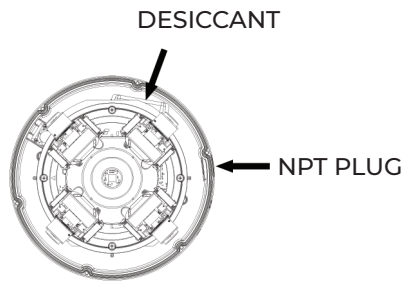


4. Attach the spring cable and tighten the 6 screws to secure the cover.

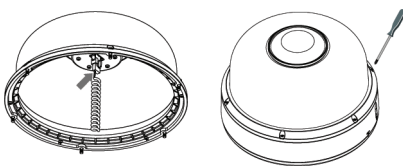 


WALL MOUNT INSTALLATION

 
1. Loosen the anti-drop screw on the lateral side of the bottom cover.

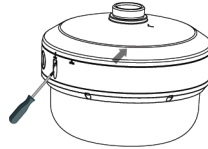

 
2. Rotate the cap (▽) from LOCK to OPEN in order to remove the cap.

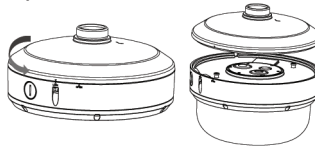

 
3. Disconnect the safety wire from the hook.

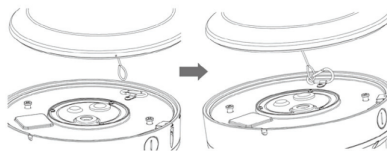

 4. Loosen the 3 screws on the bottom plate and open it.

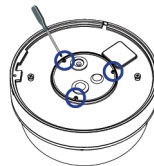

 
5. Route the network and applicable I/O cables through the grommets.

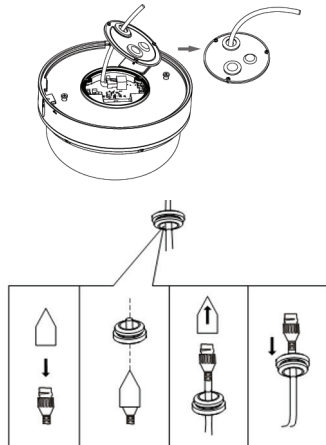


6. Reinstall the bottom plate and tighten the 3 screws.



 
7. Thread the pendant cap onto the wall mount arm and tighten the set screw.

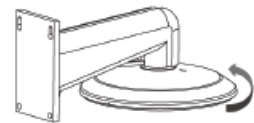

 
8. Reconnect the safety wire.

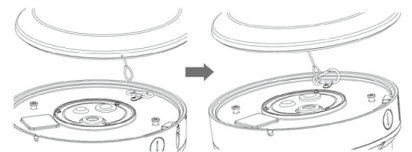

 9. Rotate the camera from OPEN to LOCK in order to fix the camera. The ▽ mark should be aligned with the LOCK (□) mark.

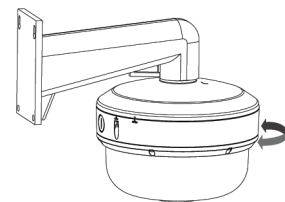


 10. Tighten the screw on the lateral side of the bottom cover.

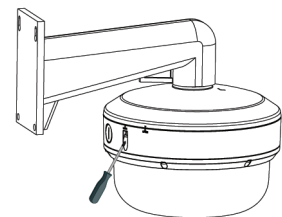


PENDANT MOUNT INSTALLATION

 
1. Loosen the anti-drop screw on the lateral side of the bottom cover.

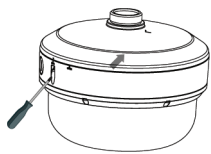

 
2. Rotate the cap (▽) from LOCK to OPEN in order to remove the cap.

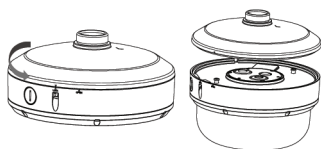

 
3. Disconnect the safety wire from the hook.

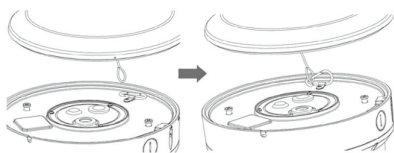

 
4. Loosen the 3 screws on the bottom plate and open it.

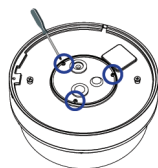

 
5. Route the network and applicable I/O cables through the grommets.

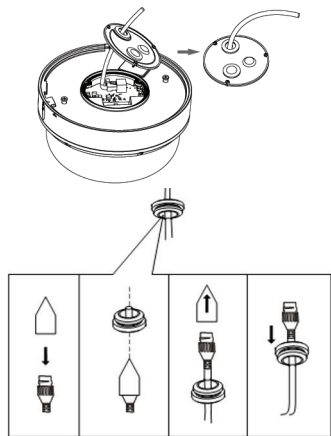

 
6. Reinstall the bottom plate and tighten the 3 screws.

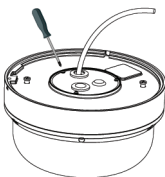

 7. Reconnect the safety wire.

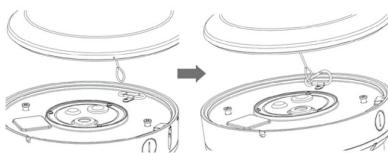

 
8. Thread the pendant cap onto the pendant mount and tighten the set screw.

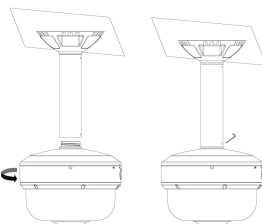


9. Rotate the camera from OPEN to LOCK in order to fix the camera. The ▽ mark should be aligned with the LOCK (□) mark.



 
10. Tighten the screw on the lateral side of the bottom cover.

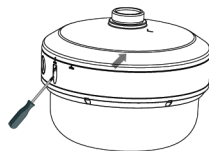


 
3. Secure the plate to the ceiling using the included screws.

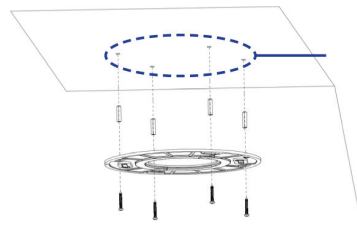

 
4. Loosen the 3 screws on the bottom plate and open it.

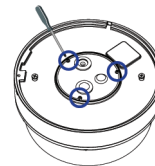

  5. Route the network and applicable I/O cables through the grommets.

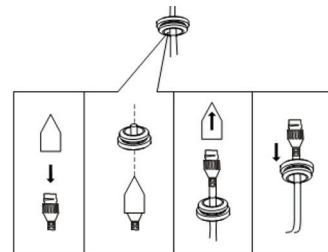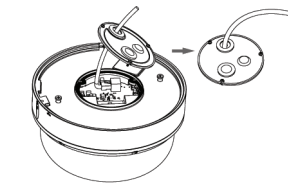


 6. Reinstall the bottom plate and tighten the 3 screws.

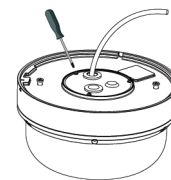


CEILING MOUNT INSTALLATION

 
1. Apply the provided template sticker to the desired installation location. With a 3/16" drill bit, drill the marked holes for the screw anchors. Remove the template sticker and insert the plastic screw anchors.

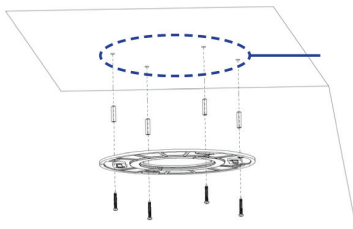

 2. Loosen the 4 screws on the plate.

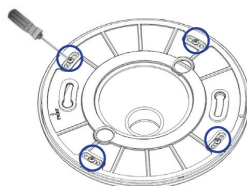

 7. Connect the safety wire.

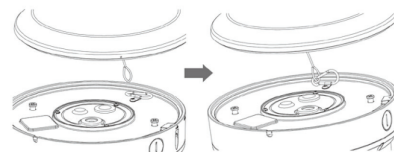

8. To attach the camera to the plate, twist the camera counterclockwise until it is secured firmly in place. Then tighten the screw on the lateral side of the bottom cover.



NOTE: Please note that the OPEN ■ mark should be aligned with the screw hole on the plate (There is only 1 screw hole on the plate for easy recognition).

NOTE: The camera can be mounted to a 4" electrical box when used with the mounting plate.