

SYSTEM CONFIGURATOR USER MANUAL

OpenEye® System Configurator Software Manual Manual Edition 31977AE – NOVEMBER 2014

SYSTEM CONFIGURATOR

The OpenEye System Configurator is a software tool that allows you to quickly and easily determine what equipment will work best for your installation. This tool allows you to estimate the storage and bandwidth requirements for any proposed installation.

If you have an existing recorder and want to add multiple new cameras, the System Configurator will help choose cameras and determine frame rate. If you are designing a system, the System Configurator can help decide what recorder to choose to work best with your camera needs.

The OpenEye System Configurator is a tool to be used for estimation only. Actual results of equipment will vary from application to application.

Using the Online Estimator

To access the System Configurator, login to the OpenEye website, and then click System Configurator on the main page You can start by selecting your cameras, or by selecting your recorder. Once you have selected your desired models and settings, use the Export Save tab to view the estimated storage and bandwidth of your proposed system.

Select Cameras



- 1. Click the Select Cameras tab.
- 2. Select your desired Type of camera.
- If you have selected IP, select the Manufacturer and Model, as well as Resolution, Codec, Images Per Second (IPS), and Motion Detection Percentage (Motion %).
- If you have selected Analog, select the Resolution and Codec, along with the Quantity, IPS, and Motion Detection Percentage (Motion %). Enable Audio if needed.
- 5. Type a **Description** for the camera, and the number of cameras (**QTY**) you are considering adding to the system with these configurations.
- To include other cameras with different settings in your estimation, click Add Camera and repeat steps 2-5, accordingly.
- 7. Type the Number of Days to Store Recorded Audio and Video, if known.
- 8. When you have finished, click Next.

Select Model

Choose your recorder by model, or choose the specifications you need to narrow your search.

To choose a model directly, scroll through the list of recorders to find your model, and then click **Select**.

Colore Decorder Order	_										2
Select Recorder Option	•									Help y	2
Storage Requirement	*	Recorders	s That Meet	Your Specification:	3						
Filter Chassis Size			Model	Description	Storage (Total)	Bitrate (Total)	Audio (Total)	IP Only C (Total)	H Hybrid CH (Total)	Analog Ci (Total)	1
Filter Recorder Options		Select	0E5-N2U642T	NVR, 20, 64CH, 278	278	90 Mbps	16	64	0	0	
Additional RAID Storage	•	Select	065-N2U646T	NVR, 20, 64CH, 678	678	90 Mbps	16	64	0		
None		Select	OE5-N2U6412T	NVR, 20, 64CH, 12TB	1278	90 Mbps	16	64	0	0	
External Storage 16TB External Storage 24TB		Select	OE5-N2U6418T	NVR, 20, 64CH, 18TB	1678	90 Mbps	16	64	0	0	
C External Storage 32TB		Select	0E5-N2U6424T	NVR, 2U, 64CH, 24TB	24TB	90 Mbps	16	64	0	0	
External Storage 48TB External Storage 64TB		Select	OES-N2U6432T	NVR, 20, 64CH, 32TB	3278	90 Mbps	16	64	0	0	
Additional IP Channels		Select	0E5-N2U322T	NVR, 2U, 32CH, 2TB	278	90 Mbps	16	32	0	0	
		Select	0E5-N2U326T	NVR, 20, 32CH, 678	678	90 Mbps	18	32	0	0	
					Storage (Required)	Bitrate (M	ibps) id)	Audio (Required)	IP Channels (Required)	Analog (Required)	
				Requirements (Based on configured cameras)	0.4GB	0.05		0	1	0	
			(External Ra	Selected model id Storage, IP Ch Upgrades, etc)	OGB	0		0	0	0	
				Remaining	-0.4GB	-0.05	5	0	-1	0	

To narrow your search, follow these instructions.

- 1. Click Storage Requirement.
- 2. Type the **Total Days of Storage Required**. If you do not know, leave this field blank.
- **Note** You can also select options indicating live monitoring or remote capabilities.
- 3. Click **Filter Chassis Size**, and then select the appropriate size (**2U**, **3U**, **4U**, or **Micro Chassis**). You can select more than one size.
- 4. Click Select Recorder Options.

- 5. Choose the options you want to include with your recorder. You can select more than one option
- Note The list of recorders will narrow with each selection you make. If your desired features do not exist in a recorder offered by OpenEye, the list will say "There are no matches based on the criteria you selected." To remedy this, eliminate options to expand your search.
- 6. Click **Additional RAID Storage** and select a storage size to include a storage upgrade in your calculation.
- Click Additional IP Channels and select the number of additional channels to include an IP channel upgrade in your calculation.
- Note Both Additional RAID Storage, and Additional IP Channels are upgrade options to be purchased in addition to your recorder.
- When you have determined your requirements, click Select next to the recorder you want to include in your calculations, and then click Next.

Export Save

When you have determined your cameras, camera settings, and recorder configuration, click **Export Save** to view the results of your calculations.

Review	w Configurati	ion									1	lelp 🛒
Details												
Camera D	etails											
rodel	descrip	otion	type	manufactur	rer resolution	codec	ips	moson	(Mbps)	Storage (GB)	IPUIT	QTY
4-816	New Car	mera	p	OpenEye	1024x768	H.264	4	15	0.48	0.77	1	0
4-611	Existing	Camera	P	OpenEye	1024×768	H.264	4	15	1.45	2.3	3	0
							R	equired Ret	ources	3.07	4	D
igital Rei	corder Details	 context on 									0.075	
Y MC	odel	Description								Storage (GB)	Analog	
OE	5-N2U6418T	N-Series 2U NVR, 64 C Standard Remote, Errer	hannel, 18TB Stor rgency Agent, Bar	age, Dual NC, Re clup Viewer, Mob	portStar Readyl (I Ne Phone Support	cluded Softwo	are: RADIUS I	/uti-Ste Remot	e,	18000	64	0
							Per	maining Dec	-	17044 03		
									ource.			
roject	Informatio											
ator		Wed May 01 2013										
late: Configurat	tion #:	Wed May 01 2013										
late: Configurat Leseller N	tion #: lame:	Wed May 01 2013 0										
late: Configurat eseller N alesperse	tion #: lame: on:	Wed May 01 2013 0	2									
ate: onfigurat eseller N alesperse	tion ≢: lame: on:	Wed May 01 2013 0										
Date: Configurat Leseller N Lalesperse roject Lo	tion #: lame: on: ⊳cation:	Wed May 01 2013 0										
)ate: Configurat Reseller N Talesperse Troject Lo	tion #: lame: on: ⊳cation:	Wed May 01 2013										
Date: Configurat Reseller N Salesperse Project Lo	tion #: lame: on: bcation:	Wed May 01 2013										
Date: Configurat Reseller N Salesperse Project Lo	tion #: lame: on: ocation:	Wed May 01 2013										
Date: Configurat Reseller N Salesperse Project Lo Project De	tion #: lame: on: pcation: pscription:	Wed May 01 2013 0										
Date: Configurat Reseller N Salesperso Project Lo Project De	tion #: lame: on: ⊳cation: sscription:	Wed May 01 2013 0										
Date: Configurat Reseller N Salesperse Project Lo Project De	tion #: lame: on: ⊳cation: sscription:	Wed May 01 2013 0										
Date: Configurat Reseller N Salespers Project Lo Project De	tion #: lame: on: ocation: escription:	Wed May 01 2013			_							
Date: Configurat Reseller N Salespers Project Lo Project De	tion #: lame: on: excation:	Wed May 01 2013										
Date: Configurat Reseller N Salesperse Project Lo Project De	tion #: lame: on: ccation: sscription:	Wed May 01 2013 0										
Date: Configurat Reseller N Salesperse Project Lo Project De Disclair	tion #: lame: on: ccation: sscription: mer	Wed May 01 2013 0			4							

If your camera requirements are too high for your chosen recorder, the result listed in **Remaining Resources** will be a negative number. You can go back to the **Select Cameras** or **Select Model** tabs to make adjustments. You can save this configuration to use these same cameras or recorders on the System Configurator at another time, without being required to manually re-enter all the information To save your estimation, follow these instructions.

- 1. Type the appropriate information into the Project Information area, and then click **Save**.
- 2. Type a title for this configuration name and a customer name, and then click **Save**.
- **Note** If you are not signed in with an OpenEye account, skip to step 3.
- 3. Type a **Configuration Number**, and then click **OK**.

To use a previously saved estimation,

- 1. Click Load.
- 2. Click **Load Configuration** next to the configuration you want to review.

Downloading Configuration

You can download your configuration to print out for a client or send via email. To download your estimation, follow these instructions.

- 1. Type the appropriate information into the Project Information area, and then click **Export**.
- 2. Click the file type you want to download (**PDF** or **XLS**).
- 3. The downloaded file can be opened, printed, and saved as desired.

www.openeye.net

1-888-542-1103

© 2014 OpenEye

All other rights are reserved to OPENEYE. OPENEYE, and OpenEye, are registered trademarks of OPENEYE in the United States and elsewhere. All other brand and product names are trademarks or registered trademarks of the respective owners.