
## CONNECTIONS

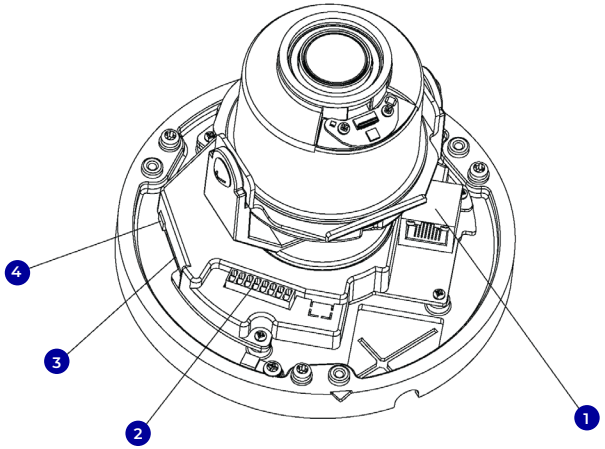


| | | | |
|---|---|---|---|
| 1 | RJ-45 | - | For network and PoE connections |
| 2 | Alarm & Audio I / O | 1 | Line Output - |
| | | 2 | Line Output + |
| | | 3 | Line Input - |
| | | 4 | Line Input + |
| | | 5 | Alarm Output - |
| | | 6 | Alarm Output + |
| | | 7 | Alarm Input - |
| | | 8 | Alarm Input + |
| 3 | microSD Card Slot | - | Supports up to 1TB microSD card for Edge storage.<br>Do not add or remove the microSD card when the camera is powered on. |
| 4 | Reset Button | - | To restore the camera to factory defaults:<br>1. Disconnect power for 30 seconds.<br>2. Reconnect power and wait 30 seconds.<br>3. Press and hold the reset button for 20 seconds. |

OpenEye
The Cloud Video Platform

Liberty Lake, WA, USA
509.232.5261
openeye.net

Copyright ©2026 OpenEye.
All Rights Reserved. Information contained in this document is subject to change without prior notice. OpenEye does its best to provide accurate information but cannot be held responsible for typos or mistakes.

This quick start guide provides only basic information on the camera's settings and operation for initial installation. Please read the user manual for optimal camera configurations.

Find the latest product documentation and software.

Scan the QR code or go to openeye.net/downloads


OpenEye
The Cloud Video Platform

# QUICK START GUIDE


**5MP Indoor IP Dome**
OE-C3013D5-S

38327AB


## CONTENTS

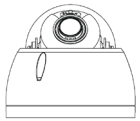


OE-C3013D5-S
Dome Camera

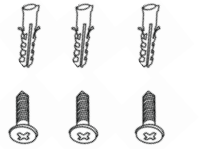

Self-Tapping
Screws &
Plastic Anchors

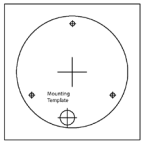


Mounting
Template




Quick Start
Guide




Security Torx
Tool




Desiccant
Packet

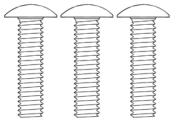

M3x8mm Machine
Screws (x3)

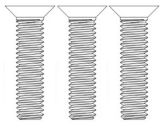

M3x8mm Machine
Screws (M4 Head)
(x3)

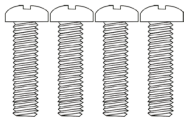

Phillips Screw
#6-32 (x4)



Phillips Screw
#8-32 (x4)



RJ45
Extension Cable

## DEFAULT USERNAME AND PASSWORD

NOTE: OpenEye IP cameras ship without a default password.

The admin user password can be set using the following methods:

1. OpenEye recorders running Apex 2.6 or newer will automatically set a new unique password when added in setup, if a new password has not already been set.

Set the Default Camera Password
Use the QR code or link for instructions on defining a unique camera password: https://answers.openeye.net/Install/Adding_Cameras_and_Camera_Settings/Default_Camera_Password

2. Connect to the camera directly through a Web Browser and follow the onscreen prompts.
3. Use the Network Camera Manager (NCM) Utility.

   Username: admin

## ASSIGNING AN IP ADDRESS

OpenEye IP cameras are set to DHCP by default. If a DHCP server is not detected after 4 minutes, the camera will default to IP address 192.168.51.2. If you are not using a DHCP server, NCM will allow you to batch configure a static IP address.
The IP address for the camera network on your Apex recorder is 192.168.51.1.

NOTE: To change this IP address please refer to your Apex recorder manual.

Selecting multiple cameras and entering IP address 192.168.51.2 will set an IP address on all selected cameras, starting at 192.168.51.2 and increase per camera.


1. Open the Network Camera Manager application.
2. Select applicable camera(s).
3. Input starting IP address, Subnet Mask, Gateway, DNS.
4. Apply changes.
5. Wait 60 seconds before refreshing NCM.

NOTE: The NCM software manual can be found at https://answers.openeye.net/Install/Adding_Cameras_and_Camera_Settings/Network_Camera_Manager

## ASSIGNING AN IP ADDRESS

By default, OpenEye IP cameras use DHCP. If no DHCP server is found, they fall back to APIPA (Automatic Private IP Addressing) and pick an address in the 169.254.0.0/16 range.
If you don't use DHCP, Network Camera Manager (NCM) can assign static IPs in bulk.
Select multiple cameras, enter a starting address (for example, 192.168.51.2), and NCM will assign that address to the first camera and increment the address for each subsequent camera.

## ADAPTER PLATE

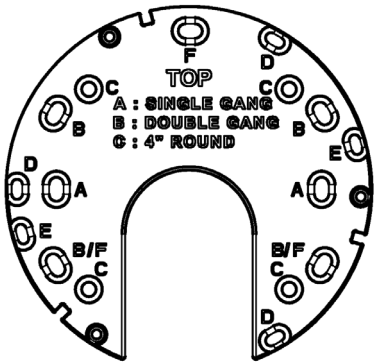


| | |
|---|---|
| A: | Single Gang junction box |
| B: | Double Gang junction box |
| C: | 4-inch Round junciton box |
| D: | OE-CA30PC-01 |
| E: | OE-CA30JB-01 |
| F: | OE-CA30WM-01 |